


## Large digit process signal display

# Fusion-P 4 digit version

## Installation & Operating Manual

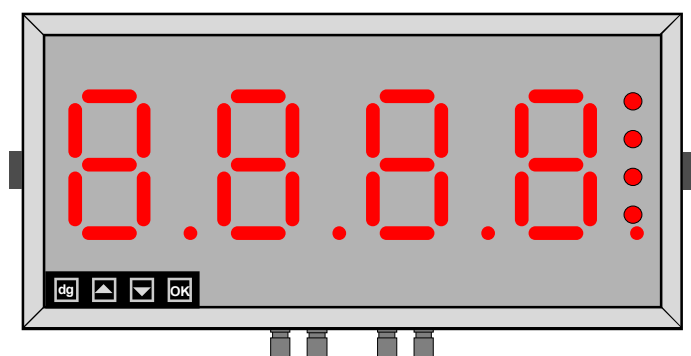

- ✓ Easy setup
- ✓ Fully scalable
- ✓ 24V sensor excitation output
- ✓ 10 point linearisation
- ✓ Optional Output 4-20mA / 0-10V isolated
- ✓ Optional Alarm output = 2 or 4 relays
- ✓ Optional Comms Output = RS232 or RS485
- ✓ 110-230V AC or 11-30V DC power

**Caution:** There is a risk of electrical shock if this instrument is not properly installed



**Caution:** Risk of danger: Read the whole manual before you install this meter



**Software version F04.01**

Revision 25 13 March 2019

# Warranty

We warrant our products against defects in materials or workmanship for a period of three (3) years from the date of purchase.

In the event of a defect during the warranty period, the unit should be returned, freight (and all duties and taxes) prepaid by the Buyer to the authorised distributor from where the unit was purchased.

The Distributor, at its option, will repair or replace the defective unit. The unit will be returned to the Buyer with freight charges prepaid by the distributor.

## LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from:

1. Improper or inadequate maintenance by the buyer.
2. Unauthorised modification or misuse.
3. Operation outside the environmental specification of the product.
4. Mishandling or abuse.

The warranty set forth above is exclusive and no other warranty, whether written or oral is expressed or implied. We specifically disclaim the implied warranties of merchantability and fitness for a particular purpose.

## EXCLUSIVE REMEDIES

The remedies provided herein are the buyer's sole and exclusive remedies.

In no event shall we be liable for direct, indirect, incidental or consequential damages (including loss of profits) whether based on contract, tort or any other legal theory.

# Contents

|   |       |
|---|-------|
| Warranty  | 2     |
| Warnings  | 4     |
| Introduction                                    | 5     |
| General Description                             | 6     |
| Suspension Mounting                             | 7     |
| Wall Mounting                                   | 8     |
| Panel Mounting                                  | 9     |
| Connections                                     | 10-11 |
| Installation hints for best performance         | 12-13 |
| 48V AC power option wiring                      | 14    |
| Display Brightness                              | 15    |
| Display Calibration Modes                       | 16    |
| Direct Calibration                              | 17-18 |
| Linearisation with Direct Calibration           | 19-20 |
| Theoretical Calibration                         | 21-22 |
| Linearisation with Theoretical Calibration      | 23-24 |
| Sensor Drift correction                         | 25    |
| Logic Input functions                           | 26    |
| Logic Input connections & Front Buttons         | 27    |
| Factory defaults                                | 28    |
| Calibration Audit number                        | 28    |
| Signal Filtering / Averaging (see also page 44) | 29-30 |
| Last Digit rounding                             | 31    |
| Scale Factor adjustment                         | 32    |
| Offset Adjustment                               | 33    |
| Menu Timeout adjustment                         | 34    |
| Reverse / Mirror display setting                | 35    |
| Bootup Routine choices                          | 36    |
| Multi Memory MEM option                         | 37    |
| Error Codes                                     | 38    |
| Output Options - installing                     | 39    |
| WEEE  | 40    |
| Equipment Specifications                        | 41    |
| Record of Revisions                             | 42    |
| Declaration of Conformity                       | 43    |

## Separate manuals for options

|                                 |                       |
|---------------------------------|-----------------------|
| Alarm option settings           | See Alarm manual *    |
| Analogue output option settings | See Analogue manual * |
| Serial output option settings   | See Serial manual *   |
| Real Time Clock setting         | See Serial manual *   |

\* Need a manual urgently?

You can download manuals from our website.

# Warnings

Please carefully read this manual and all warnings. Install the display ONLY when you are sure that you've covered all aspects.



Where the product is intended for "UL" installations, removal or addition of option boards is not permitted.



Check that the model number and supply voltage suit your application before you install the display.



Connect the display according to current IEE regulations, IEC61010 & NFPA:70 National Electric Code in USA.



Power supplies to this equipment must have anti-surge (T) fuses rated at 1A for 230V supply, 2A for 110V supply, 5A for 48VAC supply or 10A for 11-30VDC.



Don't touch any circuitry after you have connected the display, because there may be lethal voltages on the circuit board.



Do not apply power to the display if its case is open.




Only adjust on-board switches or connections with the power turned off



Make sure all screw terminals are tight before you switch the meter on.



Only clean the display's case and window with a soft damp cloth. Only lightly dampen with water. Do not use any other solvents.

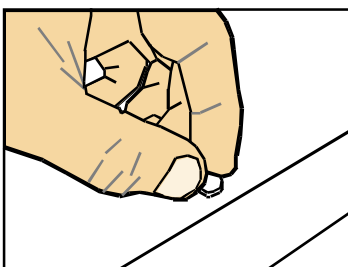

## Rear case screws - please note

The rear panel is held in place with finger-screws, which only need to be gently tightened.

**Do not use tools to tighten or loosen the screws, as this could cause damage to the internal threads.**

**Safety First .....Don't assume anything..... Always double check.  
If in doubt, ask someone who is QUALIFIED to assist you in the subject.**

# Introduction

Please contact us if you need help, if you have a complaint, or if you have suggestions to help us improve our products or services.

If you contact us about a product you already have, please tell us the full model number and serial number, so that we can give you accurate and fast help.

This product has a 3 year warranty. We will put right or replace any display which is faulty because of bad workmanship or materials. This warranty does not cover damage caused by misuse or accident.

If you return a unit for repair, please include a detailed description of the problem, and the name of a contact who we can refer to for any questions. Please mark for the attention of the QA Department.

## **IMPORTANT**

If this equipment is important to your process, you may want to buy a spare to cover possible failure or accidental damage in the future.

This is because during factory shutdown periods, you may have to wait several weeks for an equivalent replacement, or we may have no stock at the time you urgently need it.

You may also need to pay extra carriage charges if you want a fast, guaranteed courier service. Warranty repairs or replacements are usually returned with a standard courier service.

We do not offer compensation for losses caused by failure of this instrument.

If you do not agree with these conditions, please return this item in unused condition, in its original packaging and we will refund the purchase price, excluding any carriage paid.

We thought you'd prefer to know about possible delays and extra charges now, rather than during a panic. A spare unit could help to avoid these issues.

We always try to improve our products and services, so these may change over time. You should keep this manual safely, because future manuals, for new designs, may not describe this product accurately.

We believe these instructions are accurate, and that we have competently designed and manufactured the product, but please let us know if you find any errors.

# General Description

This series of displays accepts industrial sensors to allow various physical measurements to be made, such as weight, temperature, pressure, humidity etc. Different models are available for different sensor types.

The main function of this series is to give a clear numeric readout of the variable being monitored. Most models include an excitation power output, to power the sensor directly.

Various digit heights are available, to suit the maximum viewing distance required in each installation. For every 10 metres of viewing distance required, use 1" of digit height.

Various optional output modules are also available to give alarm relay outputs, analogue output or digital communications, or any combination of these options.

Displays are programmed using front panel pushbuttons. The front panel buttons can be disabled. In addition, you can connect 4 remote wired pushbuttons to the display, so that you can make adjustments while the display is mounted in an inaccessible location.

Power supply options : 100-240 VAC, 48VAC or 11-30VDC

These displays must be installed fully assembled, and must be installed according to local electrical installation rules.

When properly installed, and provided they have been ordered with cable glands exiting the lower surface of the case, they provide ingress protection to IP65 / NEMA4X from all directions.

## Safety



**Caution:** There is a risk of electrical shock if this display is not properly installed




**Caution:** Risk of danger: Read the whole manual before you install this display


Obey all safety warnings in this manual, and install the display according to local wiring and installation regulations. Failure to follow these guidelines may cause damage to the display, connected equipment, or may be harmful to personnel.

Any moving mechanical device controlled by this equipment must have suitable access guards to prevent injury to personnel if the display should fail.

# Suspension Mounting dimensions

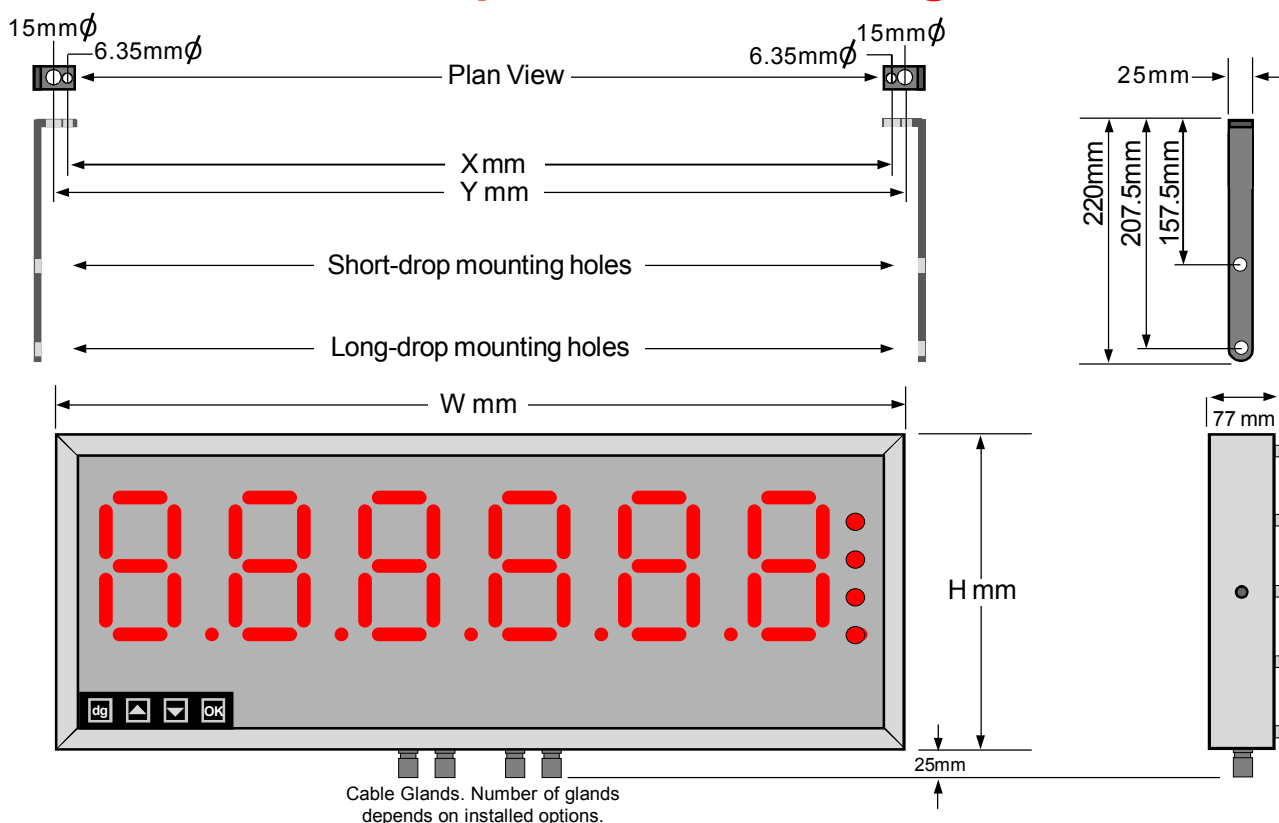

## Detail showing bracket hardware fitting sequence

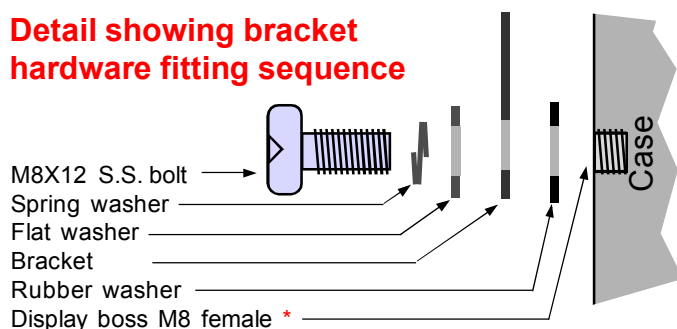


You can order these displays with the cable glands in the bottom surface (as shown) the rear, or top.

Rear glands allow you to mount the display on top of a cubicle, using the brackets shown.


**\* Do not use longer bolt threads than 12mm , or you will fracture the female boss and the case will no longer be sealed.**

| Display Format     | X mm  | H mm  | W mm  | Y mm  |
|--------------------|-------|-------|-------|-------|
| 2" 4 digit clock   | 231   | 154.5 | 291   | 247   |
| 2" 4 digit numeric | 219.5 | 154.5 | 279.5 | 249.5 |
| 2" 6 digit clock   | 340   | 154.5 | 400   | 370   |
| 2" 6 digit numeric | 316   | 154.5 | 376   | 346   |
| 4" 4 digit clock   | 393   | 195.5 | 453   | 423   |
| 4" 4 digit numeric | 374   | 195.5 | 434   | 404   |
| 4" 6 digit clock   | 593   | 195.5 | 653   | 623   |
| 4" 6 digit numeric | 556   | 195.5 | 616   | 586   |
| 6" 4 digit         | 520   | 246   | 580   | 550   |
| 6" 6 digit         | 760   | 246   | 820   | 790   |
| 8" 4 digit         | 690   | 290   | 750   | 720   |
| 8" 6 digit         | 1012  | 290   | 1072  | 1042  |
| 12" 4 digit        | 990   | 408   | 1050  | 1020  |
| 12" 6 digit        | 1480  | 408   | 1540  | 1510  |
| 16" 4 digit        | 1308  | 515   | 1368  | 1338  |
| 16" 6 digit        | 1960  | 515   | 2020  | 1990  |

# Wall Mounting dimensions

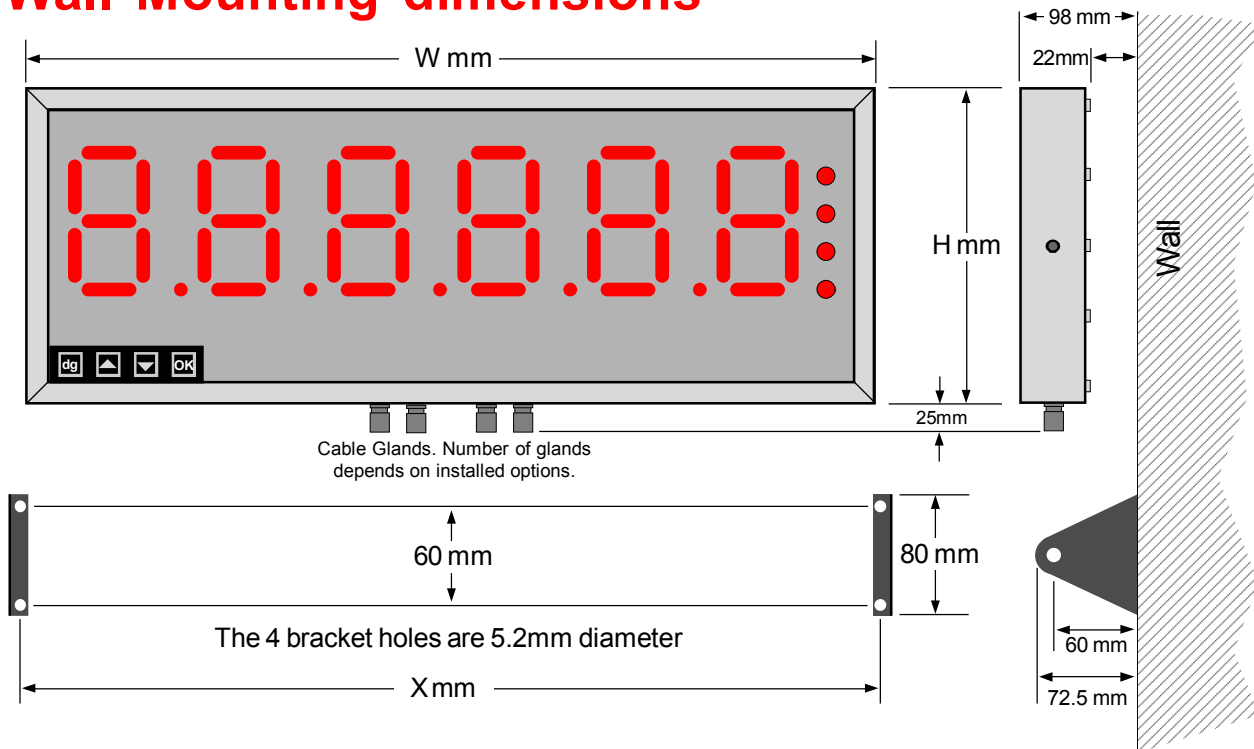

## Detail showing bracket hardware fitting sequence

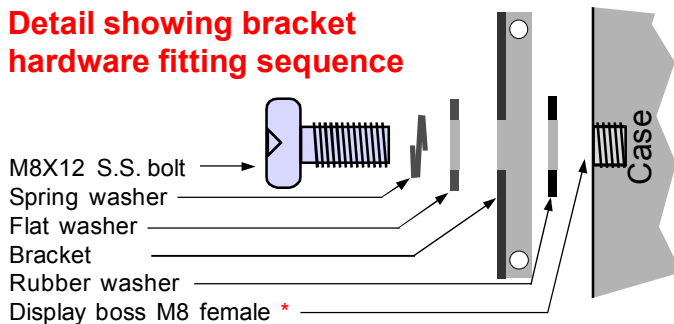

You can order these displays with the cable glands in the bottom surface (as shown) the rear, or top.


Rear glands allow you to mount the display on top of a cubicle, using the brackets shown.

**\* Do not use longer bolt threads than 12mm , or you will fracture the female boss and the case will no longer be sealed.**

| Display Format     | X mm  | H mm  | W mm  |
|--------------------|-------|-------|-------|
| 2" 4 digit clock   | 278   | 154.5 | 291   |
| 2" 4 digit numeric | 266.5 | 154.5 | 279.5 |
| 2" 6 digit clock   | 387   | 154.5 | 400   |
| 2" 6 digit numeric | 363   | 154.5 | 376   |
| 4" 4 digit clock   | 440   | 195.5 | 453   |
| 4" 4 digit numeric | 421   | 195.5 | 434   |
| 4" 6 digit clock   | 640   | 195.5 | 653   |
| 4" 6 digit numeric | 603   | 195.5 | 616   |
| 6" 4 digit         | 567   | 246   | 580   |
| 6" 6 digit         | 807   | 246   | 820   |
| 8" 4 digit         | 737   | 290   | 750   |
| 8" 6 digit         | 1059  | 290   | 1072  |
| 12" 4 digit        | 1037  | 408   | 1050  |
| 12" 6 digit        | 1527  | 408   | 1540  |
| 16" 4 digit        | 1355  | 515   | 1368  |
| 16" 6 digit        | 2007  | 515   | 2020  |




## Panel mounting dimensions

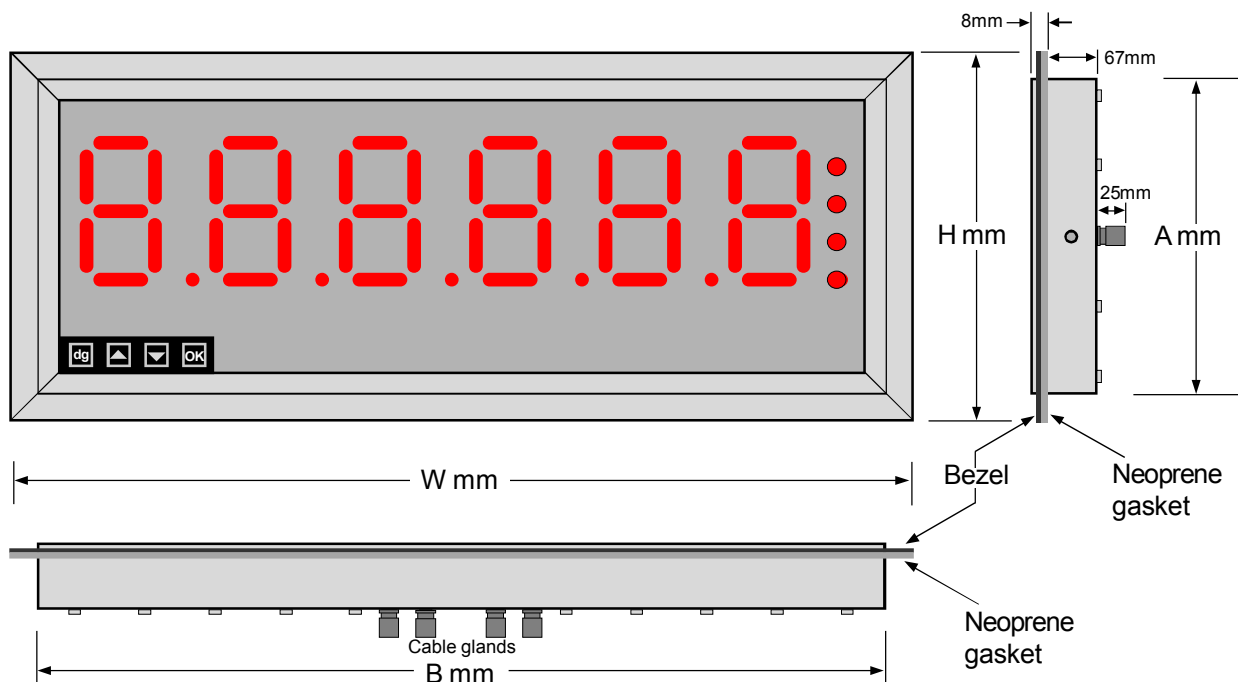

### Detail showing bracket hardware fitting sequence

## Panel cutout dimensions

A+3mm(h) x B+3mm(w)

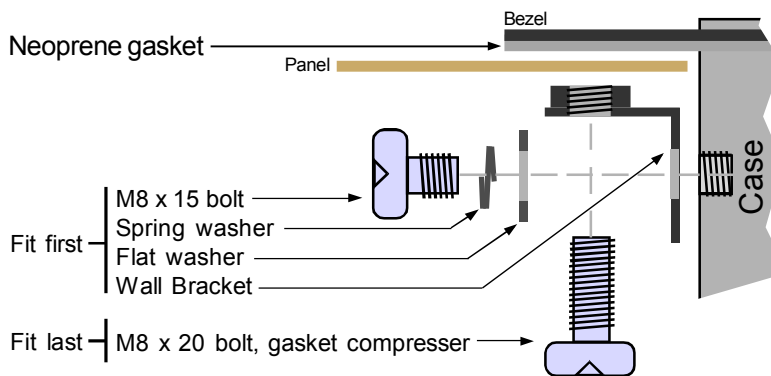

| Display Format     | H mm  | A mm  | B mm  | Wmm   |
|--------------------|-------|-------|-------|-------|
| 2" 4 digit clock   | 172.5 | 154.5 | 291   | 309   |
| 2" 4 digit numeric | 172.5 | 154.5 | 279.5 | 297.5 |
| 2" 6 digit clock   | 172.5 | 154.5 | 400   | 418   |
| 2" 6 digit numeric | 172.5 | 154.5 | 376   | 394   |
| 4" 4 digit clock   | 213.5 | 195.5 | 453   | 471   |
| 4" 4 digit numeric | 213.5 | 195.5 | 434   | 452   |
| 4" 6 digit clock   | 213.5 | 195.5 | 653   | 671   |
| 4" 6 digit numeric | 213.5 | 195.5 | 616   | 634   |
| 6" 4 digit         | 264   | 246   | 580   | 598   |
| 6" 6 digit         | 264   | 246   | 820   | 838   |
| 8" 4 digit         | 308   | 290   | 750   | 768   |
| 8" 6 digit         | 308   | 290   | 1072  | 1090  |
| 12" 4 digit        | 426   | 408   | 1050  | 1068  |
| 12" 6 digit        | 426   | 408   | 1540  | 1558  |
| 16" 4 digit        | 533   | 515   | 1368  | 1386  |
| 16" 6 digit        | 533   | 515   | 2020  | 2038  |


# Connections



## Warning:


Disconnect all power before removing the rear of the display


There is a wide range of possible locations for the input board, output board and power supply board/s. Their locations depend on the height of digits, number of digits, brightness of digits and any installed options. Because the permutation of possible locations is large, we will not describe the location of boards within the display, but simply identify the connectors and their functions on each board, below ...

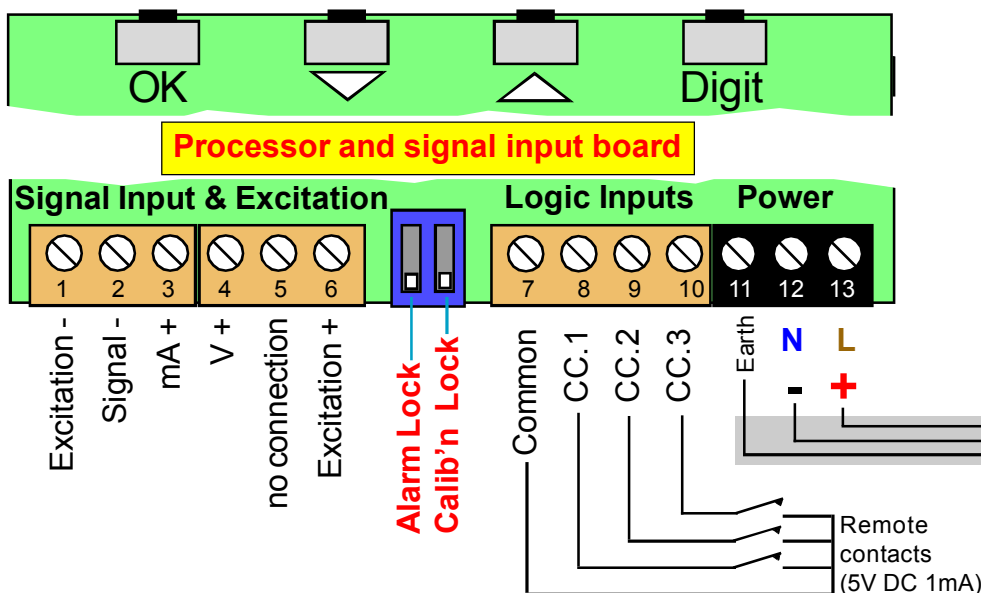


## Connection Examples

- A) 4-20mA direct, Term2 = -, Term3=+
- B) 4-20mA 2 wire transmitter, link terminals 1&2, Term3 = -, Term6=+
- C) 0-10V direct, Term2 = -, Term4 = +
- D) 3 wire potentiometer (if POT option ordered) link terminals 1&2 to low end of potentiometer, Term4 to wiper, Term6 to high end of pot

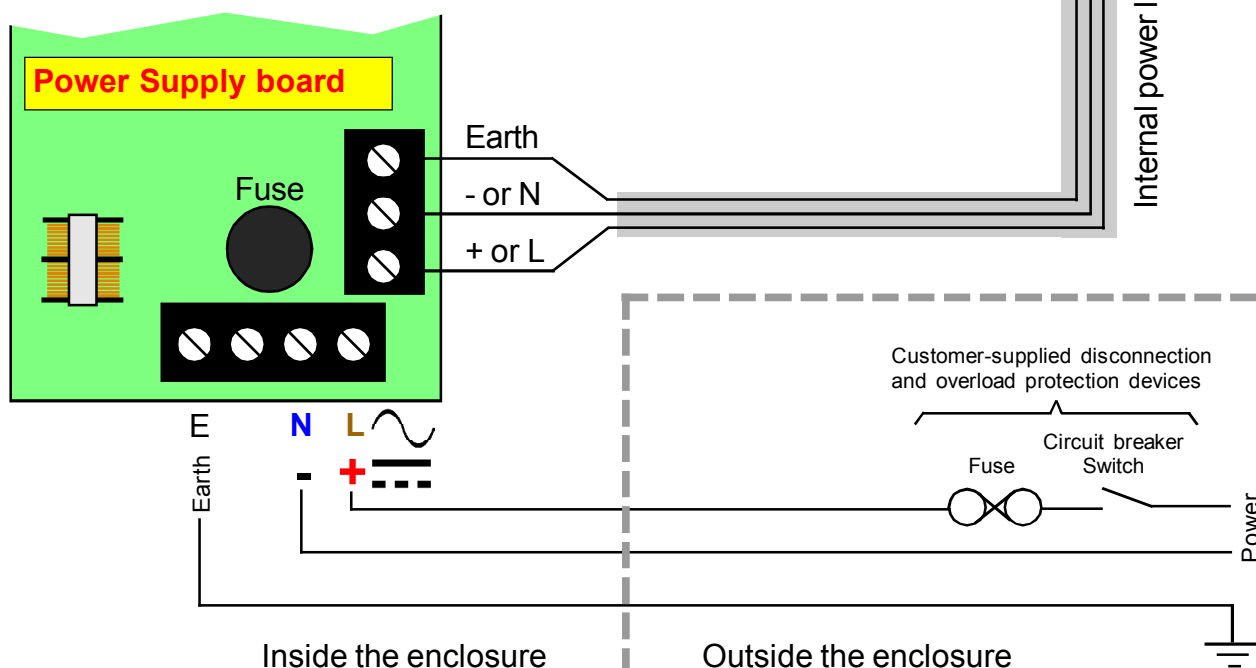


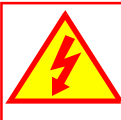

**Warning:**  
Disconnect all power before removing the rear of the display





**Connectors and options**  
Connectors may be present even if output options are not installed. Refer to rating label to see installed options.

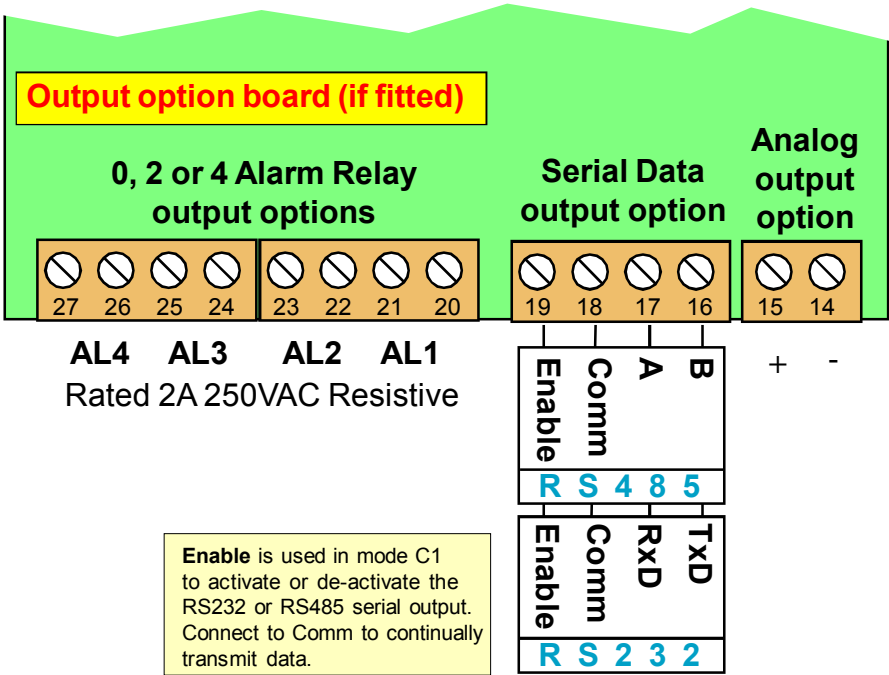

Remote programming button connector

On one of the display boards, you will find a 7 way connector, to which you can wire remote programming buttons, to allow adjustment of the display’s settings when the display is inaccessible.

You can also enable or disable the display’s front panel buttons, either by a remote contact closure, or by an on-board push-on jumper switch, which is located near to the remote button connector. When the contact is closed, or the push-on switch fitted, the front buttons are enabled.

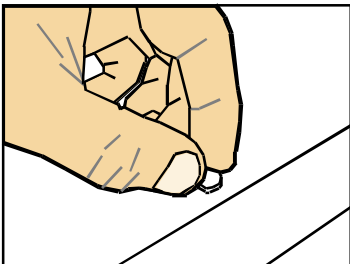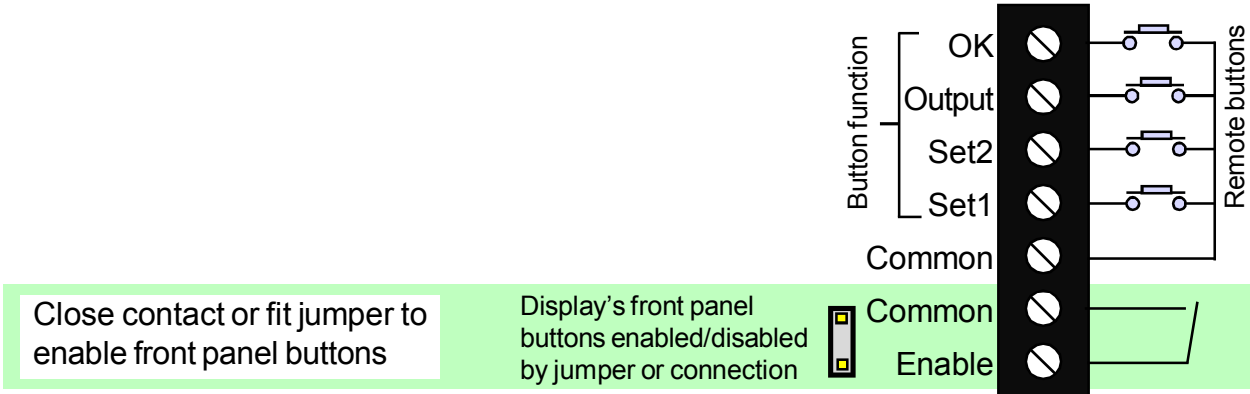

Rear case screws - please note


The rear panel is held in place with finger-screws, which only need to be gently tightened.  
**Do not use tools to tighten or loosen the screws, as this could cause damage to the internal threads.**

# Installation hints for best performance

This section offers several suggestions which will help you get the best performance from your measurement system.


Some sensors generate comparatively small signals which can easily be corrupted by the potentially high level of electrical noise which can be created by electrical machinery such as motors, welding systems, discharge lighting, AC power inverters and solenoids. These steps will ensure you get the best possible performance from your system.

1. Use good quality screened signal cable, with twisted pairs. Belden 8777NH, Belden 9503 and AlphaWire 6010C are good choices, available from many electrical distributors.
2. If you are using multi-pair twisted cable, each pair should be dedicated to a single display as shown opposite, for maximum noise immunity. This will ensure that any electrical noise induced in the cable is properly cancelled. Mixing destinations carelessly amongst the twisted pairs can actually worsen noise performance.
3. The cable should be routed away from noisy wiring and devices such as power feeds from inverters, discharge-lighting cables, welder cabling etc, and should preferably be routed in a dedicated low voltage signalling/instrumentation conduit or cable tray.
4. Screened cable should be earthed at the display end only.
5. All wires and screens coming out of the screened cable should be kept as short as possible to minimise pickup of noise.
6. If you are using barriers, you should earth your screen as shown below, paying particular care that you do not earth both ends of any run of cable.

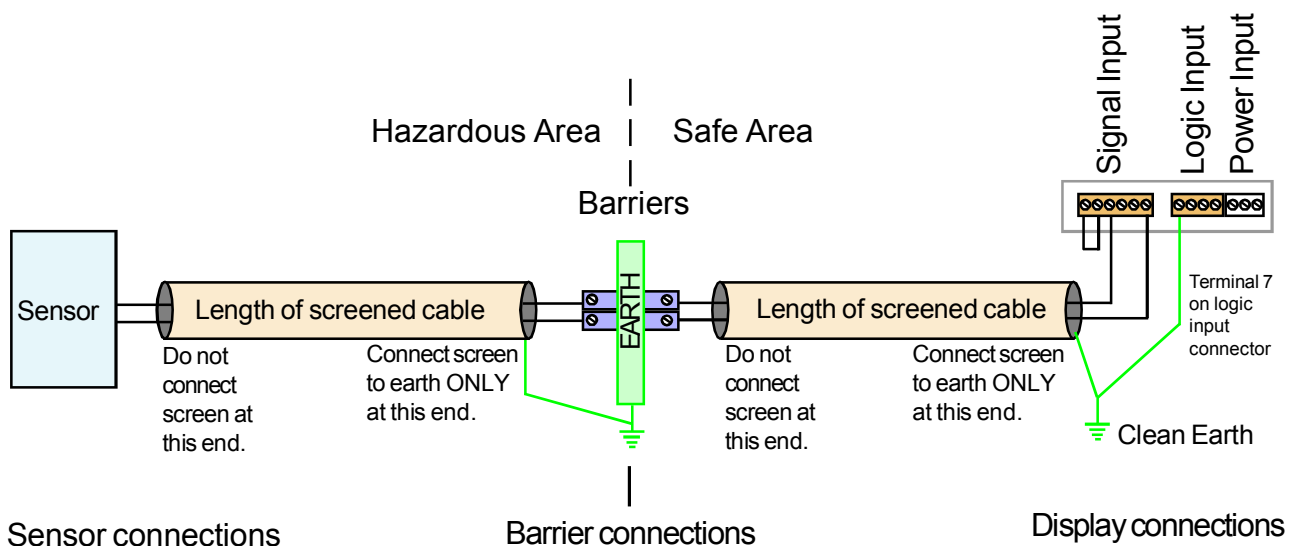


When using multi-core screened cable to connect several displays to several sensors, please be sure to use one twisted pair for each display and sensor.

Do NOT use a wire from one pair for signal positive and a wire from another pair for signal negative, as this will prevent the twisted cables from cancelling any induced electrical noise.

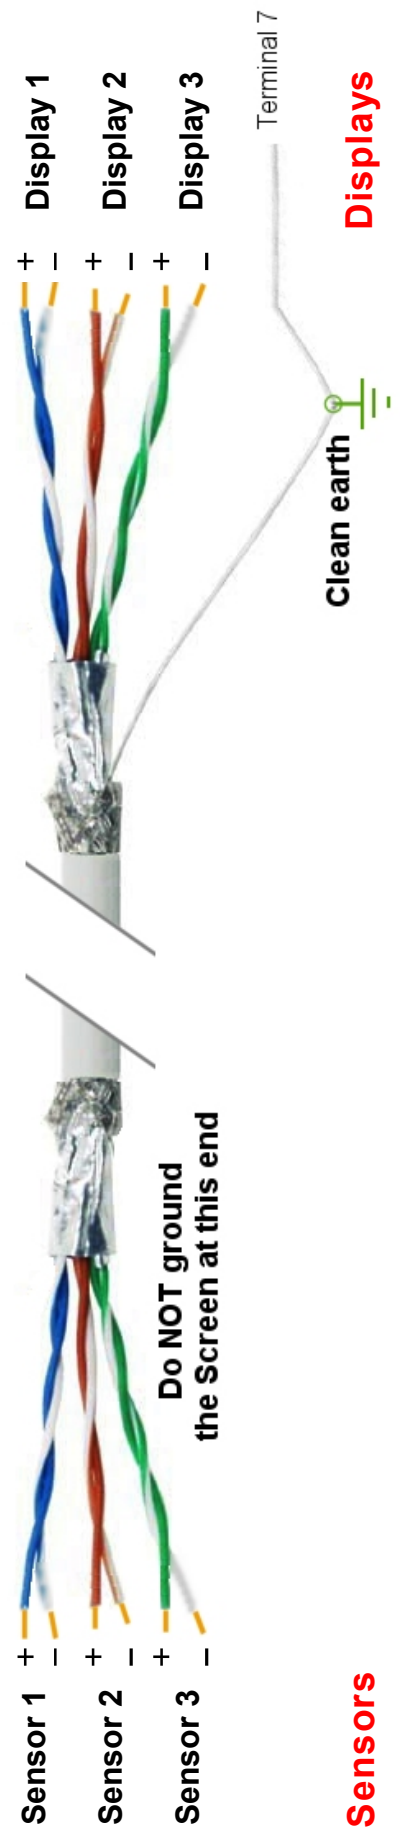


48V AC power wiring option

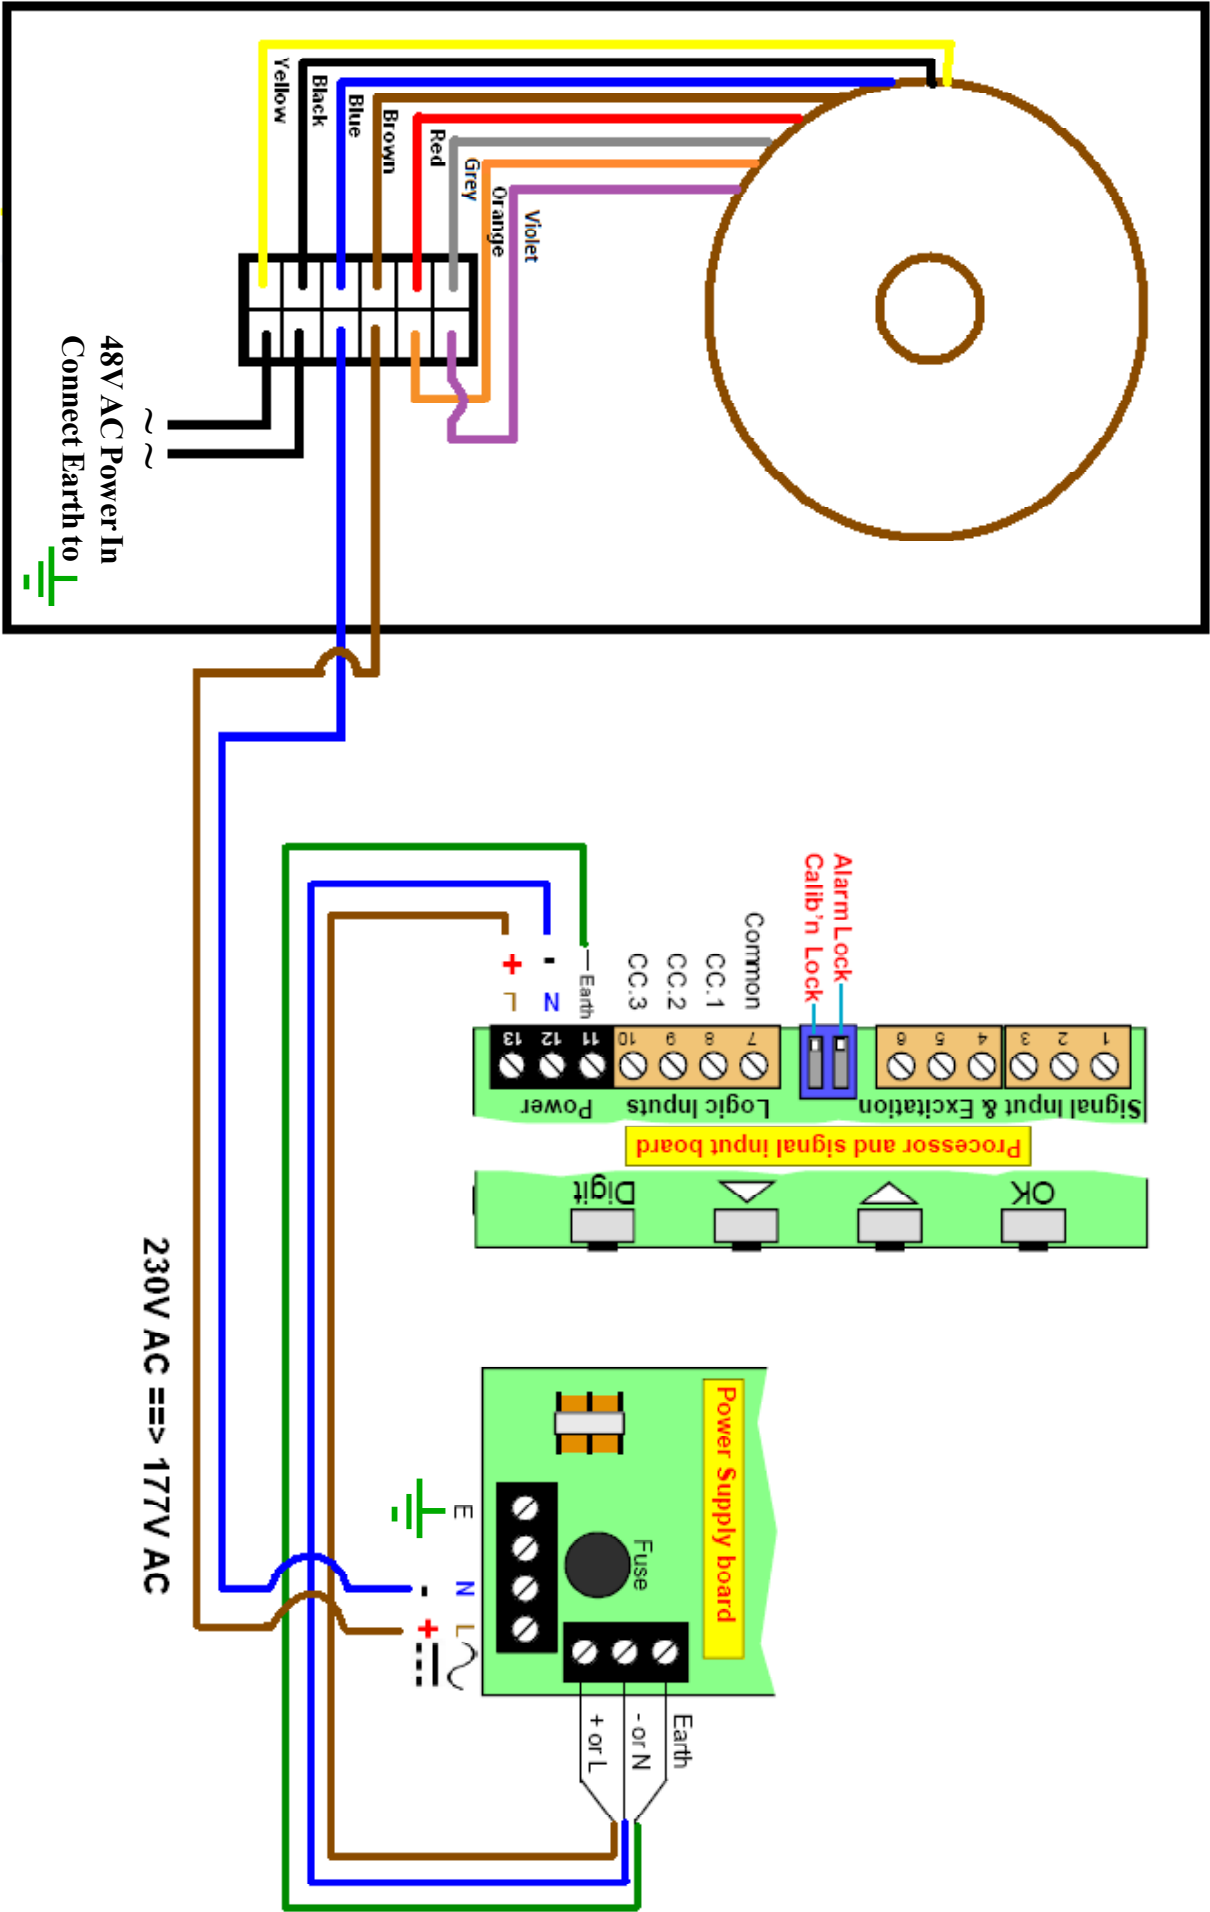

# Display Brightness


You can adjust the display brightness at any time, provided the display is locked.

- 1

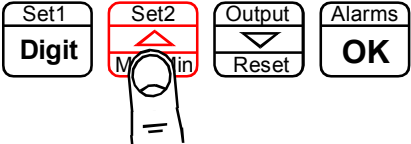


Press 3 seconds

**Lockout Switch must be ON**

 


Circuit board ON
- 2

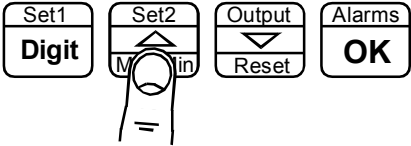


Press for 3 seconds

Display shows **br il**  
Each press of the UP button will select a new brightness level. There are 7 brightness levels to choose from.  
(Default = Full brightness)
- 3

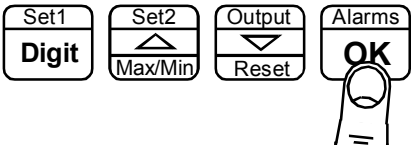

Press to accept



**Done!**



Did you know, we make this display in two brightness versions? Standard brightness for use inside, and Daylight Viewing for use outside in direct sunlight. The Daylight Viewing version has suffix -DLV in its part number.

# Meter Calibration Modes


You can choose from two main calibration methods.

**1. Direct Calibration** - this is when you connect the meter to your system and make the meter read what you want it to, at 2 different points. *This is the preferred calibration method, because it allows you to calibrate the system as a whole.*

**2. Theoretical Calibration** - this is when you type in the sensor's theoretical signal level at the bottom and top of its range and then type in the value the display should show, for each signal level.

How to choose a calibration method:-

**1**

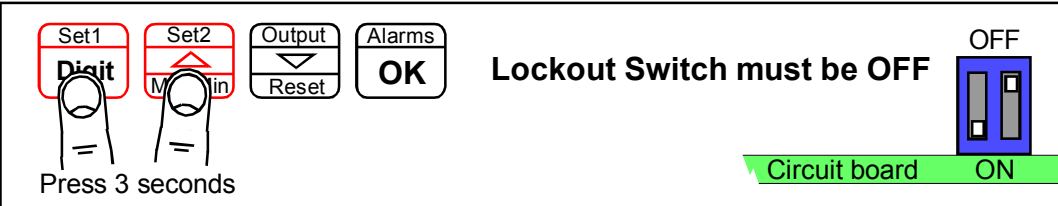


Set1 Set2 Output Alarms  
Digit Max/Min Reset OK  
Press 3 seconds

Lockout Switch must be OFF

Circuit board ON


**2**

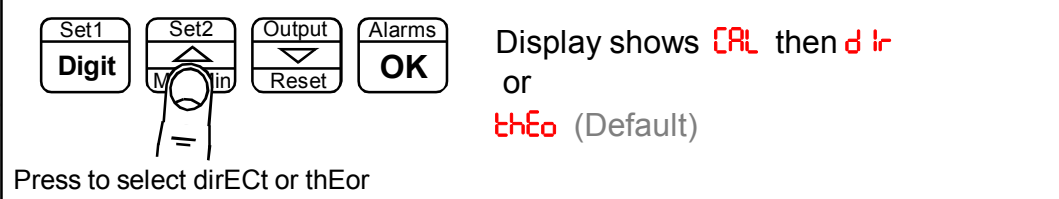

Set1 Set2 Output Alarms  
Digit Max/Min Reset OK  
Press to select dirECt or thEor

Display shows **dirECt** then **thEor** or  
**thEor** (Default)


**3**

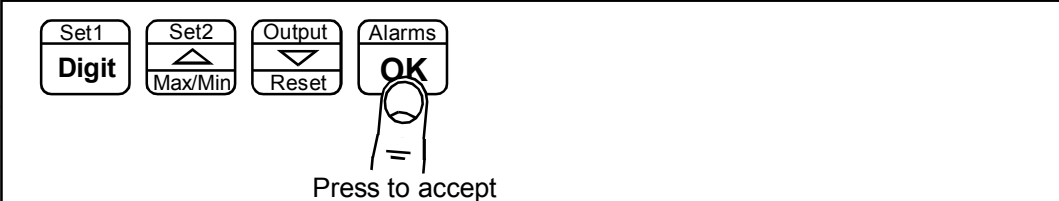

Set1 Set2 Output Alarms  
Digit Max/Min Reset OK  
Press to accept

If you chose Theoretical, you will now be asked whether your input signal will be DC Current or DC voltage ... the display will show **dirECt** followed by **dc A** or **dc U**


**4**

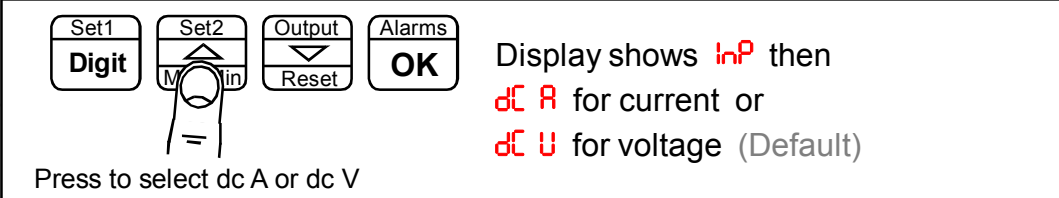

Set1 Set2 Output Alarms  
Digit Max/Min Reset OK  
Press to select dc A or dc V

Display shows **dirECt** then  
**dc A** for current or  
**dc U** for voltage (Default)

**5**

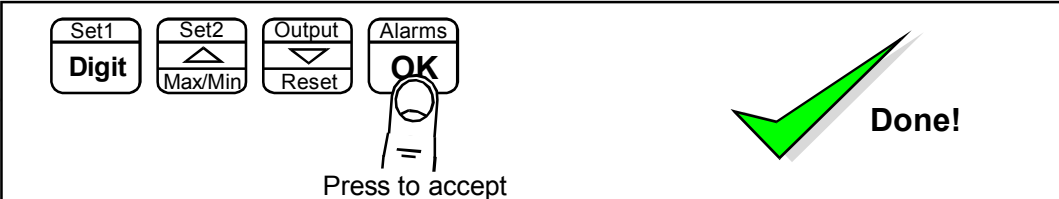

Set1 Set2 Output Alarms  
Digit Max/Min Reset OK  
Press to accept

Done!



# Direct Calibration - Full Scale Setting


This is when you connect the meter to your system and make the meter read what you want it to, at 2 different points. *This is the preferred calibration method, because it allows you to calibrate the system as a whole.*

How to do direct calibration:-

If you have not done so before, please select Direct Calibration mode from the previous page.

First we recommend you set the **FULL SCALE** calibration ...


- 1

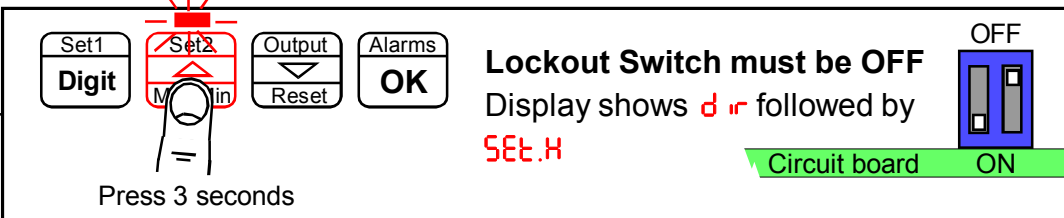


Press 3 seconds

**Lockout Switch must be OFF**  
Display shows **d r** followed by **SEt.H**

Circuit board **ON**
- 2

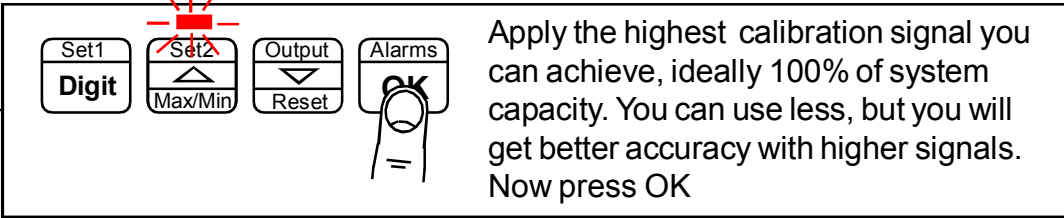


Apply the highest calibration signal you can achieve, ideally 100% of system capacity. You can use less, but you will get better accuracy with higher signals. Now press OK
- 3

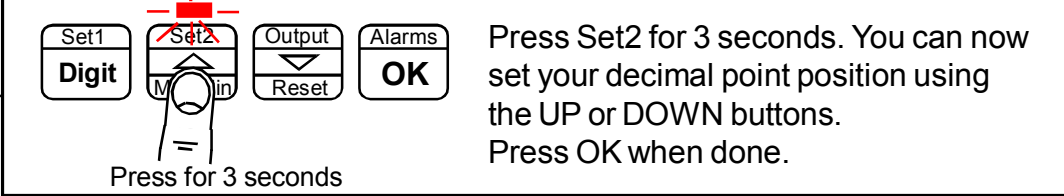


Press for 3 seconds

Press Set2 for 3 seconds. You can now set your decimal point position using the UP or DOWN buttons. Press OK when done.
- 4

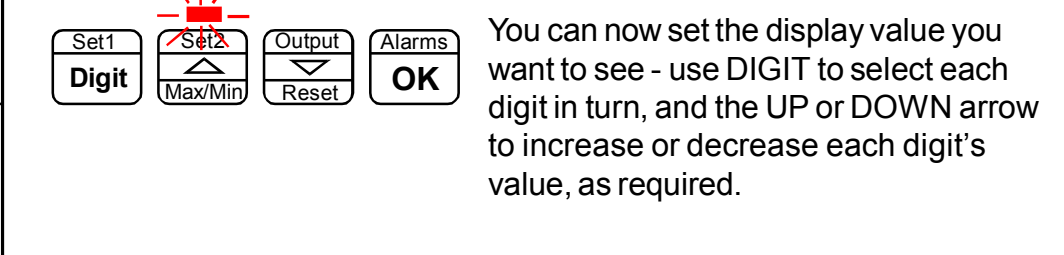

You can now set the display value you want to see - use DIGIT to select each digit in turn, and the UP or DOWN arrow to increase or decrease each digit's value, as required.
- 5

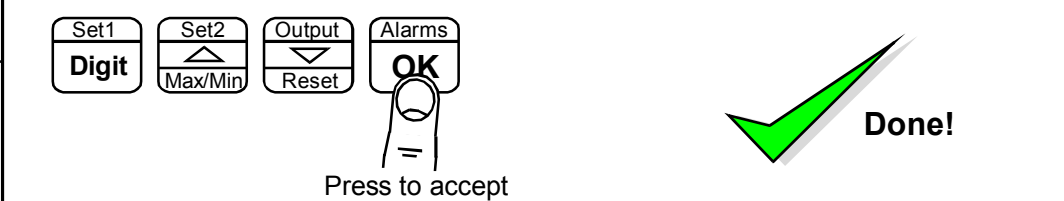


Press to accept

**Done!**

# Direct Calibration - Zero Setting


How to calibrate the **ZERO** point.

- 1

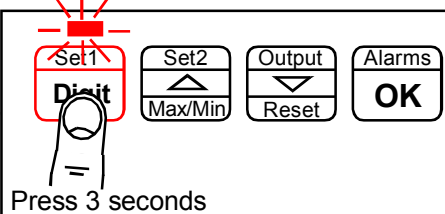


Press 3 seconds

**Lockout Switch must be OFF**

 


Circuit board ON
- 2

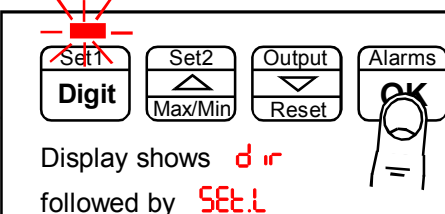


Display shows **0.00**  
followed by **Set1**


Apply the lowest calibration signal you can achieve, ideally 0% of system capacity.  
Now press OK
- 3

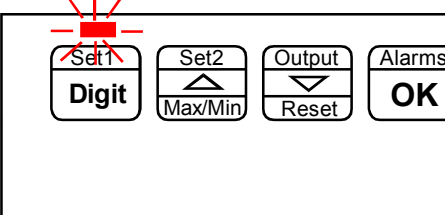

You can now set the display value you want to see - use DIGIT to select each digit in turn, and the UP or DOWN arrow to increase or decrease each digit's value, as required.
- 4

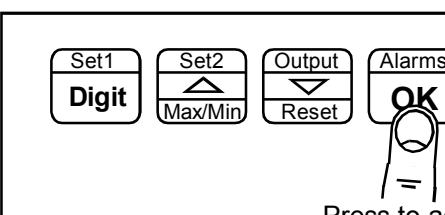

Press to accept



**Done!**

You can set Zero first, if you prefer, but you will not be able to change the decimal point position in the ZERO calibration step.

This will not be an issue if your zero calibration reading is 0, but may become confusing otherwise.

When you have finished your calibration, please remember to put the calibration lockout switch in its ON position, to protect your settings.

# Linearisation with Direct Calibration

If your system is non linear, you can calibrate the meter and correct for this with the lineariser function.

You will need to apply a series of known loads, starting at 0 and working up to full scale. You will then tell the meter what it should read for each applied load. You can use up to 10 points.

First, you must select Direct Calibration Mode (see page on calibration Modes)  
Then, proceed as shown below...

1

Set1  
Digit

Set2  
Min

Output  
Reset

Alarms  
OK

Press together, briefly

**Lockout Switch must be OFF**

Display will show **L n. 1** or  
**L n. 0** (Default)

OFF

Circuit board ON

2

Set1  
Digit

Set2  
Min

Output  
Reset

Alarms  
OK

If the display shows **L n. 0**, press Set2 button briefly so that the display shows **L n. 1**, then press OK

3

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

The display will show **SE.00**  
Ensure no load is applied to the system and press OK.

The display will now show **rd00**  
You can now tell the meter what it should display for this load.

Select each digit in turn with the DIGIT button, and increase or decrease each digit's value using the UP or DOWN button, until the display is set as required. Press OK when done.

4

Set1  
Digit

Set2  
Min

Output  
Reset

Alarms  
OK

The display will show **rd.Pt**  
Press OK

Continued ...

## Linearisation with Direct Calibration - cont'd.

5

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

The display will show SE.01  
 Apply your 1st known load to the system and press OK.

The display will now show rd 01  
 You can now tell the meter what it should display for this load.

Select each digit in turn with the DIGIT button, and increase or decrease each digit's value using the UP or DOWN button, until the display is set as required. Press OK when done.

6

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

The display will show rd.Pt

Press OK if you want to Add another calibration point, you will repeat the previous steps, each time incrementing "Set XX" and "rd XX" up to Set 09 and rd 09 which are the last available points.

If you want to finish adding points, press Set2 until the display shows SAVE, and then confirm by pressing OK

If you want to abort the setup, press Set2 until the display shows Quit and then press OK

7


Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

**Done!**

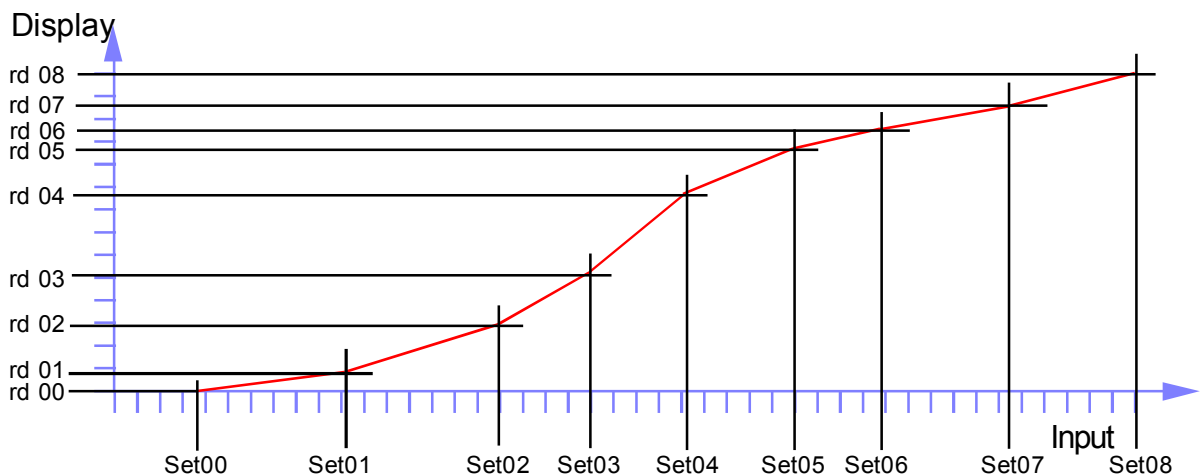

# Theoretical Cal. - Decimal Point & Full Scale

This is when you type in the sensor's theoretical signal level at the top and bottom of its range and the value to display, for each signal level.



If you have not done so before, please select Theoretical Calibration mode from the **Meter Calibration** page AND choose whether your input is current or voltage.

First we recommend you set the **FULL SCALE** calibration ...

- 1

Press 3 seconds

Lockout Switch must be OFF

Circuit board ON
- 2

Display shows ~~thEo~~ followed by ~~dC R~~ or ~~dC U~~, depending on whether you have chosen current or voltage input, then ~~inH~~.
- 3

You can now specify the maximum input signal. Use DIGIT to select each digit in turn, and the UP or DOWN arrow to increase or decrease each digit's value, as required. eg set ~~20.00~~ if your input is 4-20mA

Press to accept
- 4

Defaults are  
4-20mA = 0-100.0 for dCA and  
0-10V = 0-100.0 for dC V

Display now shows ~~rdH~~, briefly. You can now specify the maximum reading and decimal point position. Press Set2 button for 3 seconds to set decimal point position. Use up and down arrows to move the decimal point and press OK when done. Then, use DIGIT to select each digit in turn, and the UP or DOWN arrow to increase or decrease each digit's value, as required. eg set 100.0 if your display range is 0 to 100.0
- 5

Press to accept


Done!

# Theoretical Calibration - Low end calibration

This is when you type in the sensor's theoretical signal level at the top and bottom of its range and the value to display, for each signal level.


If you have not done so before, please select Theoretical Calibration mode from the **Meter Calibration** page.

1

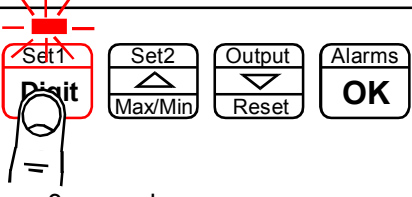


Press 3 seconds

**Lockout Switch must be OFF**



Circuit board ON


2

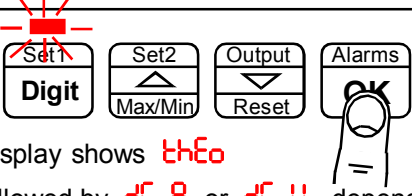

Display shows **thEo** followed by **dC A** or **dC U**, depending on whether you have chosen current or voltage input, then **In Lo**


Press OK. You can now specify the lowest input signal. Use DIGIT to select each digit in turn, and the UP or DOWN arrow to increase or decrease each digit's value, as required. eg set **04.00** if your input is 4-20mA

3

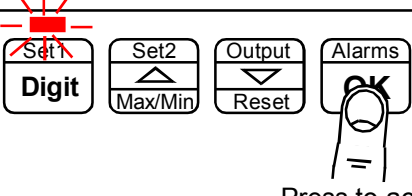

Press to accept


4

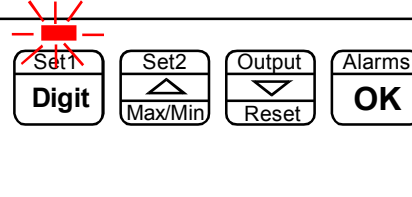


Display now shows **rd Lo** briefly. You can now specify the low reading.

Use DIGIT to select each digit in turn, and the UP or DOWN arrow to increase or decrease each digit's value, as required. eg set **000.0** if your display range is 0 to 100.0

5

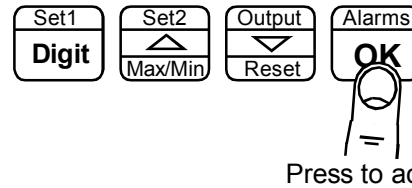

Press to accept



**Done!**

You can set Zero first, if you prefer, but you will not be able to change the decimal point position in the ZERO calibration step. This will not be an issue if your zero calibration reading is 0, but may become confusing otherwise.


# Linearisation with Theoretical Cal.

If your system is non linear, you can calibrate the meter and correct for this with the lineariser function.

With this method, you can enter theoretical values for input signal and display values, without having to connect a sensor.

First, you must select Theoretical Calibration Mode (see page on calibration Modes)  
Then, proceed as shown below...

- 1

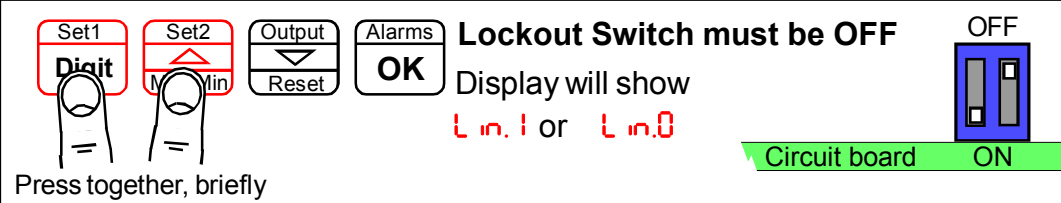


Set1 Digit Set2 Max/Min Output Reset Alarms OK

Press together, briefly

Lockout Switch must be OFF


Display will show **L in. 1** or **L in. 0**

Circuit board ON
- 2

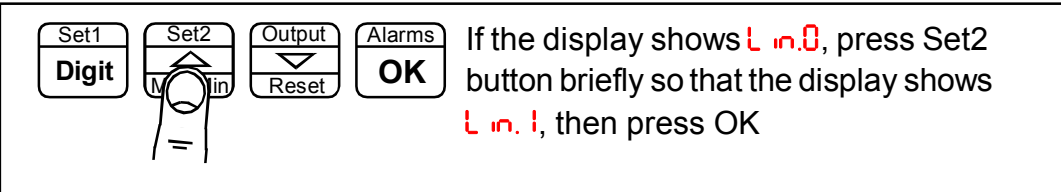

Set1 Digit Set2 Max/Min Output Reset Alarms OK

If the display shows **L in. 0**, press Set2 button briefly so that the display shows **L in. 1**, then press OK
- 3

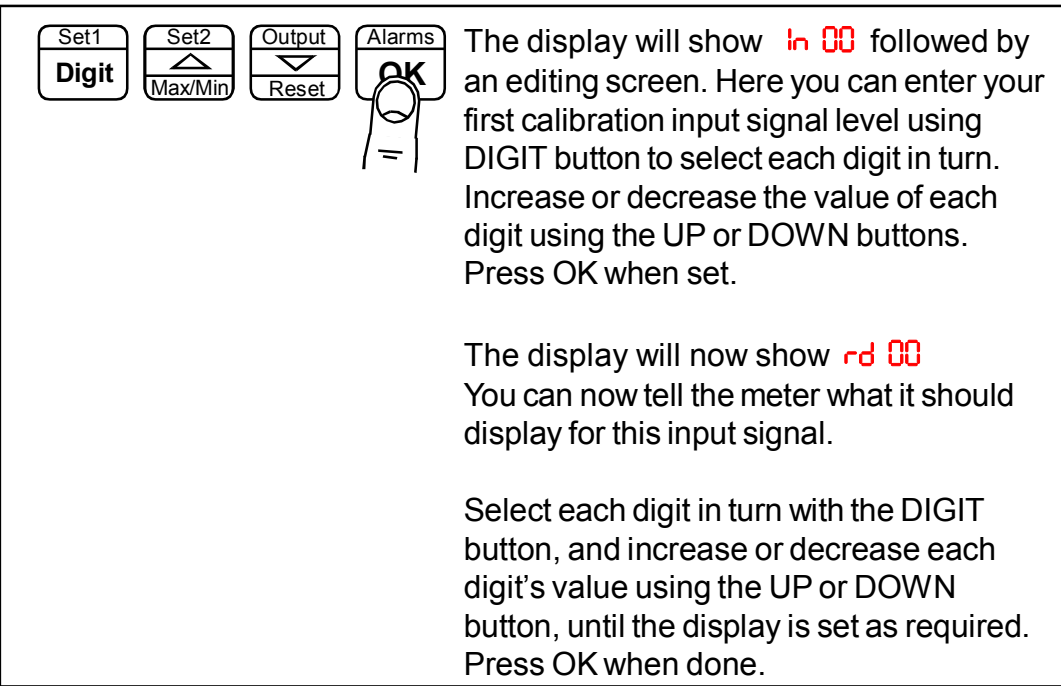


Set1 Digit Set2 Max/Min Output Reset Alarms OK

The display will show **in 00** followed by an editing screen. Here you can enter your first calibration input signal level using DIGIT button to select each digit in turn. Increase or decrease the value of each digit using the UP or DOWN buttons. Press OK when set.

The display will now show **rd 00**  
You can now tell the meter what it should display for this input signal.

Select each digit in turn with the DIGIT button, and increase or decrease each digit's value using the UP or DOWN button, until the display is set as required. Press OK when done.
- 4

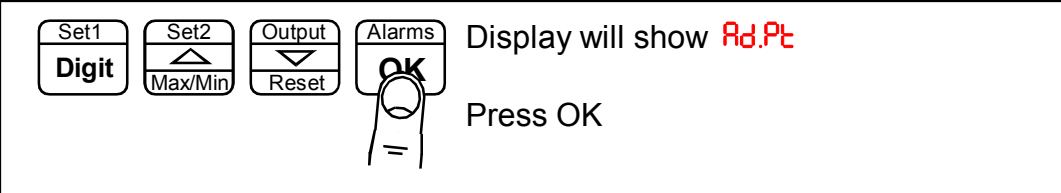


Set1 Digit Set2 Max/Min Output Reset Alarms OK

Display will show **rd Pt**

Press OK

Continued ...

## Linearisation with Theoretical Cal. - cont'd.

 

6

5

|              |         |        |        |
|--------------|---------|--------|--------|
| Set1         | Set2    | Output | Alarms |
| <b>Digit</b> | Max/Min | Reset  | OK     |

The display will show **In 01** followed by an editing screen. Here you can enter your next calibration input signal level using DIGIT button to select each digit in turn. Increase or decrease the value of each digit using the UP or DOWN buttons. Press OK when set.

The display will now show **rd 01**  
You can now tell the meter what it should display for this input signal.

Select each digit in turn with the DIGIT button, and increase or decrease each digit's value using the UP or DOWN button, until the display is set as required. Press OK when done.

6

|              |         |        |        |
|--------------|---------|--------|--------|
| Set1         | Set2    | Output | Alarms |
| <b>Digit</b> | Max/Min | Reset  | OK     |


The display will show **rd Pt**

Press OK if you want to Add another calibration point, you will repeat the previous steps, each time incrementing **In XX** and **rd XX** up to In 09 and rd 09 which are the last available points.

If you want to finish adding points, press Set2 until the display shows **SAVE**, and then confirm by pressing OK

If you want to abort the setup, press Set2 until the display shows **Quit** and then press OK

**Done!**

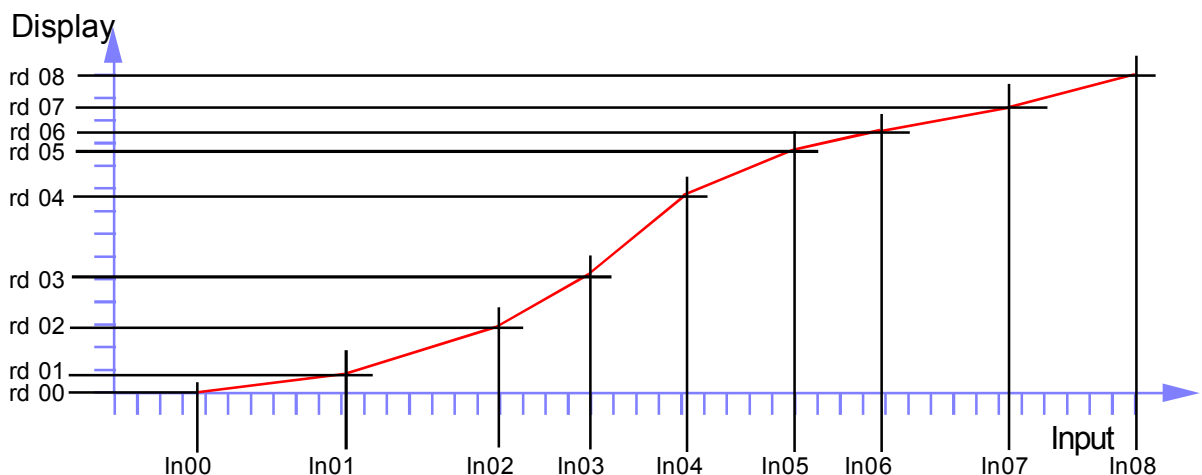



# Sensor Drift correction

If your system is normally reading 0, for example as is typical with platform scales or a torque meter, you may find a small amount of sensor drift caused by changes in temperature, ageing etc.

We can automatically correct for slow, long term drift, by comparing your signal to 0 every 30 seconds, and re-calibrating to remove any detected movement.

This does not affect the sensitivity of your system, and is only applied for readings less than 8 least-significant counts.

The corrected value is stored in non-volatile memory, so that any drift trend will be re-applied after you have switched off the meter.

1

Set1  
Digit

Set2  
Max/Min

Output  
↓

Alarms  
OK

Press together, briefly

Lockout Switch must be OFF

OFF

ON

Circuit board

2

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press OK button briefly and repeatedly until you see **drF.0** or **drF.1** displayed.

3

Set1  
Digit

Set2  
Max/Min

Output  
↓

Alarms  
OK

Press briefly to toggle

Press DOWN or UP button to toggle between **drF.0** or **drF.1**

**drF.0** = No Correction (Default)  
**drF.1** = Correction is active

4

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press to accept

✓

Done!

# Logic input functions

The three contact closure inputs on the rear of the meter have default functions which are:-

Contact closure 1 = Tare  
Contact closure 2 = Peak/Valley display  
Contact closure 3 = Reset

You can re-assign these to include :HOLD, Nett/Gross value display, Memory page address 1,2 or 4 (only if Multi-memory MEM option is installed)

1

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

**Lockout Switch must be OFF**

OFF  
  
ON

Press 3 seconds

2

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press repeatedly until you see **CC.1**, followed by the existing function for Contact Closure 1.  
  
After you have set **CC.1**, you will get the prompt **CC.2** to allow you to set Contact Closure 2 function and when you have set CC.2 you will get the prompt **CC.3** to allow you to set Contact Closure 3 function

3

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Use UP or DOWN buttons to select from these available functions...  
  

Defaults are:-  
**CC.1** = **tArE**  
**CC.2** = **PU**  
**CC.3** = **rSt**

**tArE** = Tare display to 0  
**PU** = Peak/Valley toggle  
**rSt** = Reset  
**HoLd** = Freeze display  
**ne.Gr** = Nett / Gross display  
**PA.1** = Page Address 1\*  
**PA.2** = Page Address 2\*  
**PA.4** = Page Address 4\*

4

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press to accept

**Done!**

\* Only available if the Multi-memory MEM option is installed

26 Teknikvej 69, DK-5260 Odense S

Tel.: +45 6591 9802

<https://vetec.dk>


# Logic input connections and front buttons

The previous page explained how to select the functions of the 3 logic inputs. You can connect remote contact closures or open NPN collectors to activate these logic inputs.

The logic input provides a 5V DC signal. When you connect this to common, a current of 1mA will flow. Because this is a small signal, we recommend you use switches with gold plated contacts, or self cleaning contacts, for best long term reliability.

The logic inputs are not galvanically isolated from the input signal.

The logic inputs are only activated when the lockout switch is ON

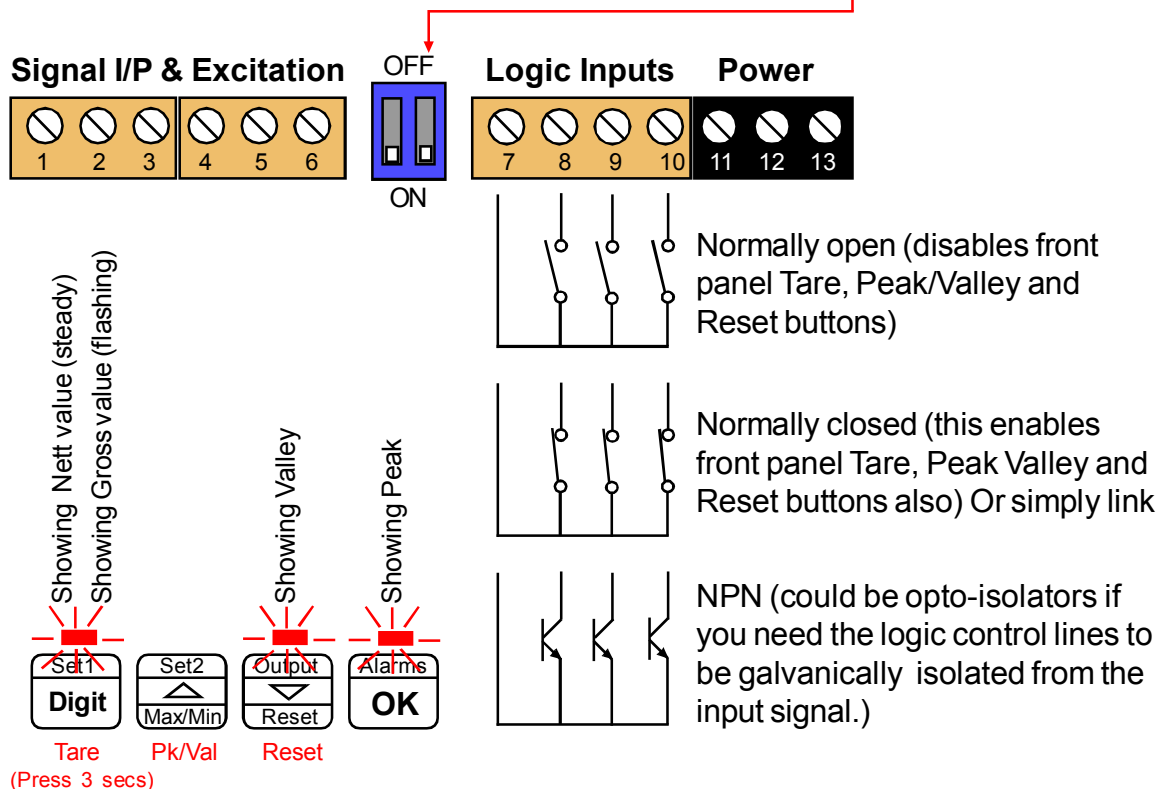

**TARE** = Tares display to 0. Often used in weighing systems to zero a display prior to making a measurement. Net weight is shown once tared. When a display has been tared the small LED above the Set1 button will be illuminated.

**PU** = Peak/Valley toggle. Allows you to view the maximum and minimum values which have been displayed since last reset. 0% LED illuminates when showing valley, 100% LED illuminates when showing peak.

**Reset** = Reset. This clears any tare, peak, valley, alarm latch

**Hold** = Freezes the displayed value for as long as the Hold input is closed

**Net.Gr** = Allows you to toggle between Nett and Gross values on the display

**PR.1 .. 4** = Page Addresses, if MEM option is installed.

# Factory Defaults

You can return the display to its factory default conditions whenever you wish. If you do so, you will permanently lose all your settings and will need to start from the beginning again.

The calibration Audit Counter will NOT be reset, there is no way provided to reset this value, as it is intended as a secure record to indicate whether changes have been made to the display since it was last calibrated..

1

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press together for 3 seconds

Lockout Switch must be OFF

OFF

ON

Circuit board ON

2

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press the DOWN button to change the display to **DEF.Y** (Defaults Yes) if you want to return to default conditions.

Display shows :-  
**DEF.n** (Defaults no)

3

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press to accept

Done!

## Calibration audit number

Your display includes a non-resettable counter which increments each time you make a change to the display's calibration. This is useful if you want to check whether a display has been altered since it was last calibrated.

The Calibration audit number starts at **CL.01** up to **CL.FF** allowing up to 255 alterations to be recorded. Whenever you want to check the calibration audit number, press and hold the 2 outer buttons (Set1 + Alarms) for more than 3 seconds.

1

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK


Press together for 3 seconds

Done!

# Signal Filtering / Averaging


You can adjust the filtering time constant to reduce the effect of noise or instability on your input signal. A larger FIL value will give a more stable display, but the response to signal changes will be slower.

Because your output options, such as analogue output, alarm relays and serial output are all derived from the displayed value, they will respond at the same rate as the filtered display.

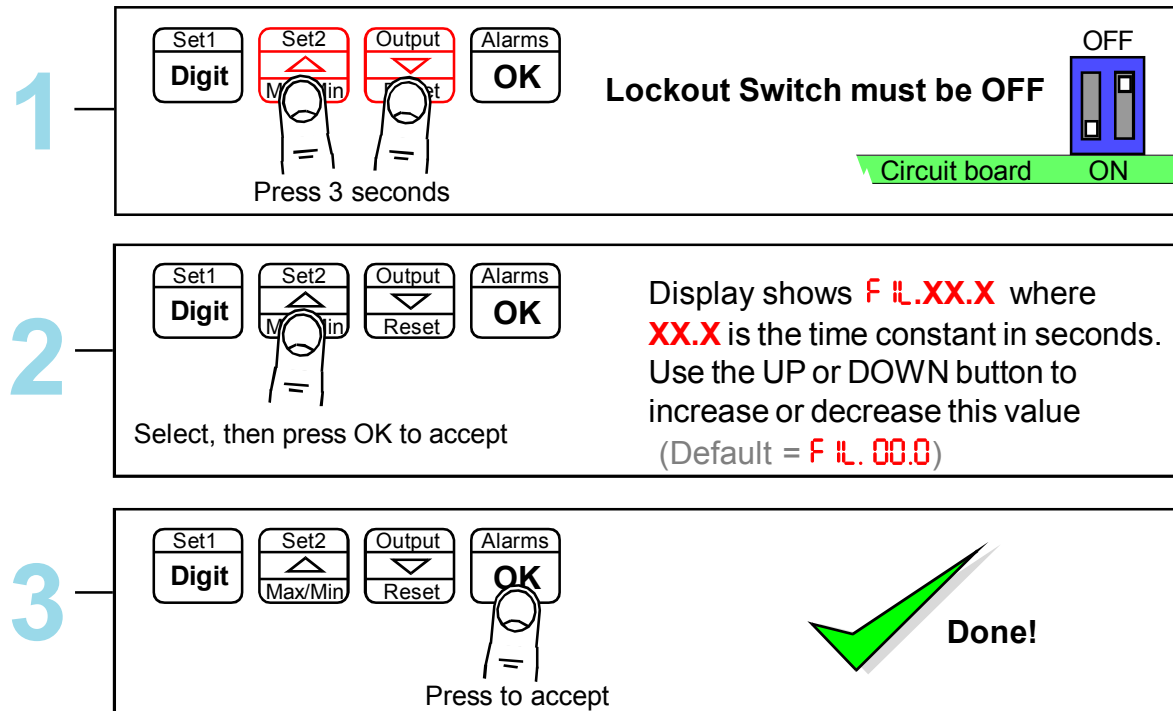

See also Filter Jump setting if your signal is particularly noisy and you cannot get sufficient smoothing with this filter.

This meter also includes an active filter for removing the effects of vibration. It is shipped with the filter enabled for maximum stability. You can move a push-on jumper switch to change the filter response to maximum speed if you wish. See below.

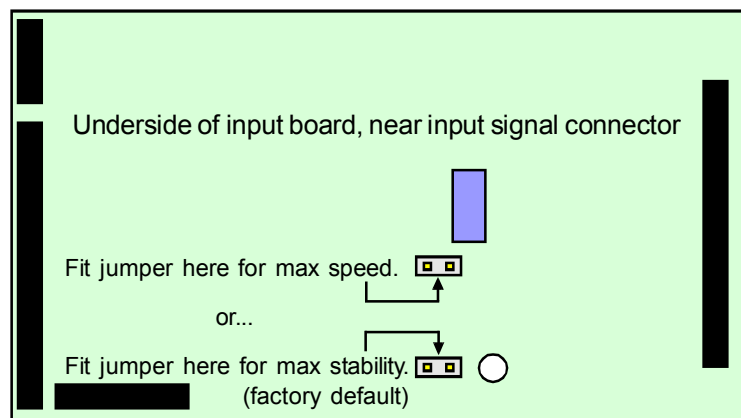

# Filter Jump value

See the Easy/Advanced mode selection page near the beginning of this manual, and choose advanced mode.

The Filter Jump value allows you to decide how the display will respond to a process step change. It does this by overriding the filtering, if the input signal moves by more than a chosen amount in one conversion. The Filter Jump default value is 10%.

This means that for noise amplitude which has a peak value of less than 10% of the input range, filtering will be applied. Any signal movement greater than 10% of the input range will cause the display to jump immediately to that value, without filtering. After that jump, normal filtering will be re-applied, provided signal movement thereafter is less than 10% per conversion.

## Guidance:

For noisy systems, increase the Filter Jump value up to a maximum of 99. Choose a value which gives a good compromise between filtering and response speed.

For reasonably clean signals, a Filter Jump value of around 10 or less will give a good compromise between filtering and response speed to step change inputs.


1

Set1  
Digit


Set2  
Max/Min

Output  
Reset

 Alarms  
OK

  
Press 3 seconds

**Lockout Switch must be OFF**

   
OFF  
Circuit board ON


2

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK



Press repeatedly until you see **FJ.XX** where **XX** is the Filter Jump percentage  
(Default = **FJ.09**)

3

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

You can set from **00** to **99**. Use the DIGIT and UP or DOWN button to increase or decrease this value.


4


Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

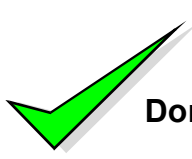


 **Done!**

Press repeatedly to accept and return to display

# Last Digit rounding up by 1, 2, 5, 10, 20 or 50

You can adjust the way the display rounds up, which is useful if you want to display a very large number, but do not want jitter on the last digit.

The display can be set to round up to the nearest 1 (no rounding) 2, 5, 10, 20 or 50

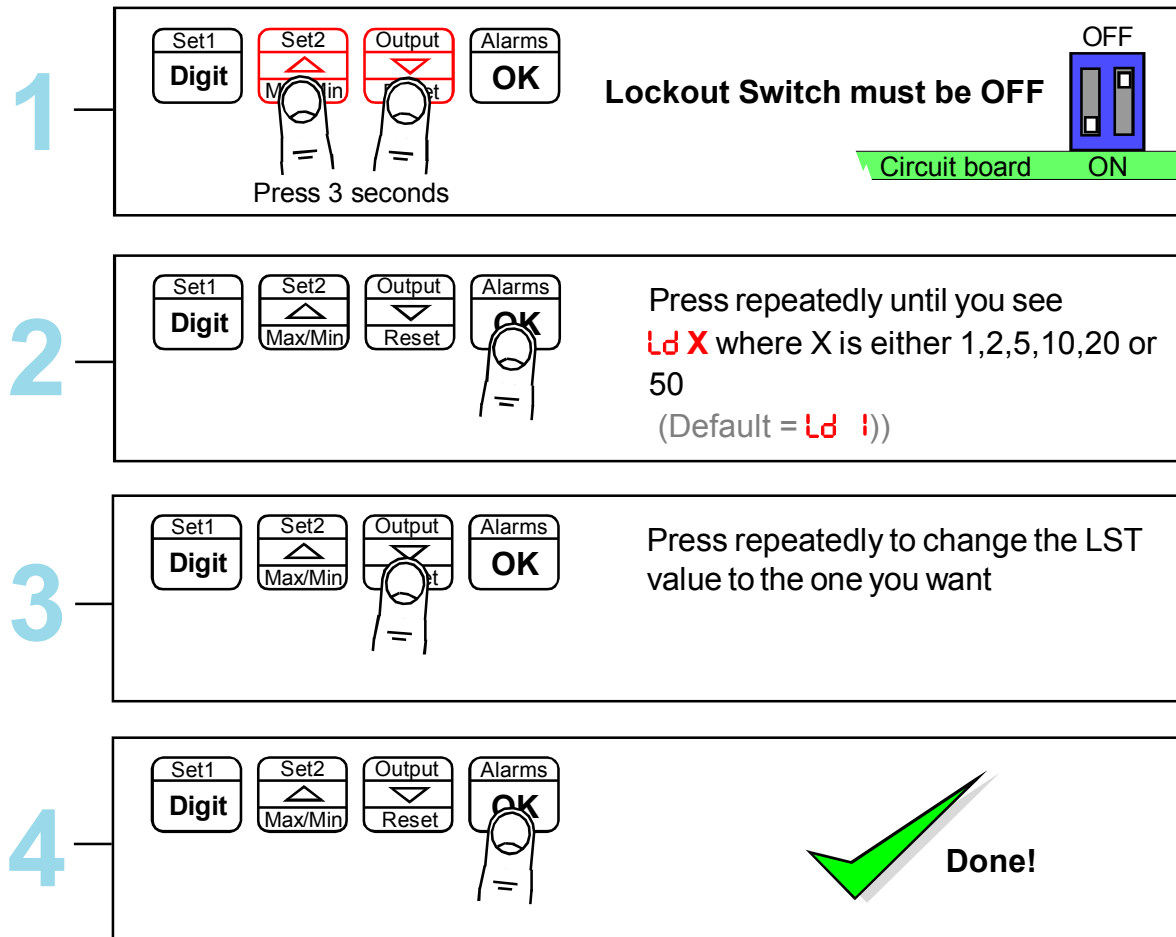

# Scale Factor adjustment

After you have calibrated your meter, you can use the SCALE feature to make fine adjustments to calibration, without affecting the calibration itself.


## Example

### Changing volume units of measure from litres to Imperial gallons

You could also use the SCALE to convert your readout from litres to imperial gallons, without affecting the calibration. Simply set SCALE = 0.220 and your meter which was calibrated in litres will now read in imperial gallons.

### Changing weight units of measure from kg to pounds

You could also use the SCALE to convert your readout from kg to pounds, without affecting the calibration. Simply set SCALE = 2.205 and your meter which was calibrated in kg will now read in pounds.

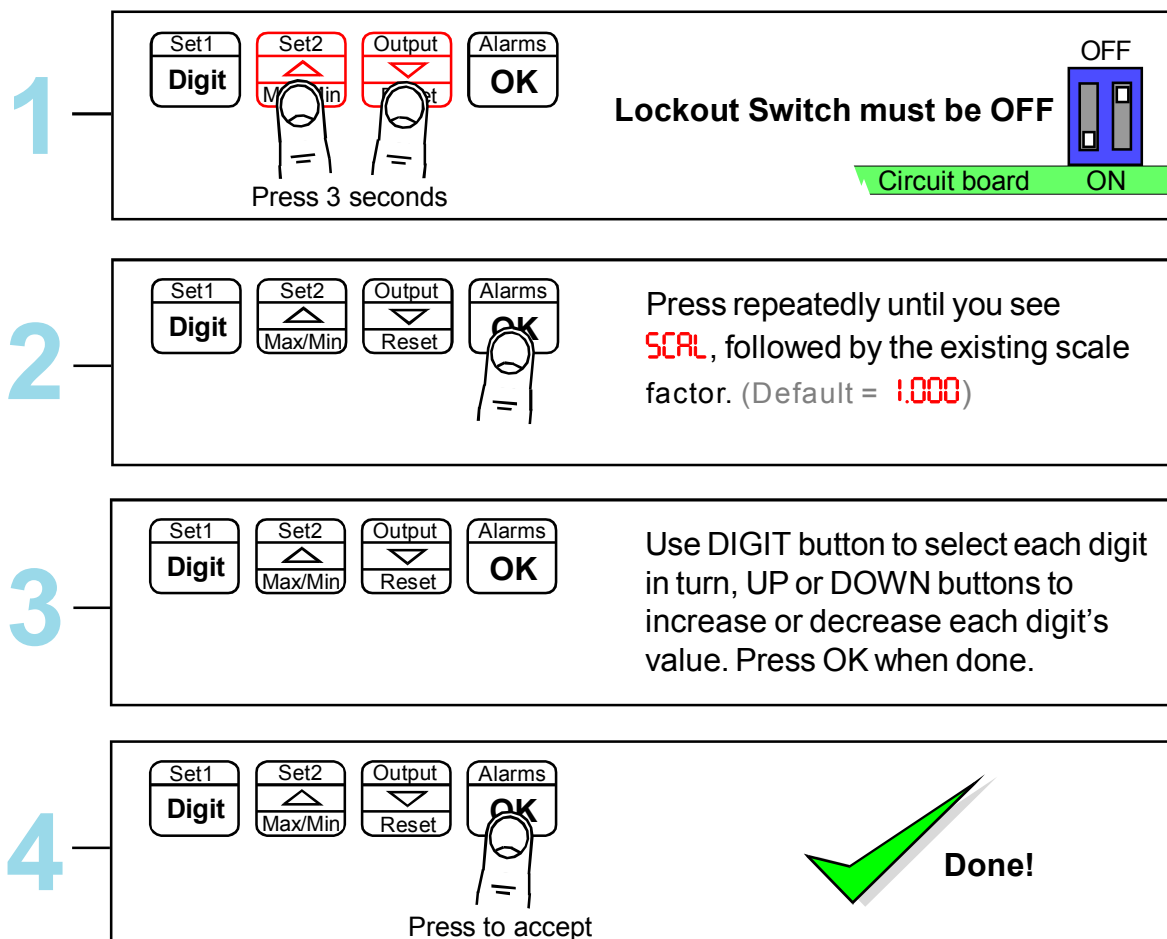


You may want to adjust an offset value also, see separate OFFSET page for this feature.



# Offset adjustment

After you have calibrated your meter, you can use the **OF.St** feature to make fine additions or subtractions to the reading, without affecting the calibration itself.


- 1

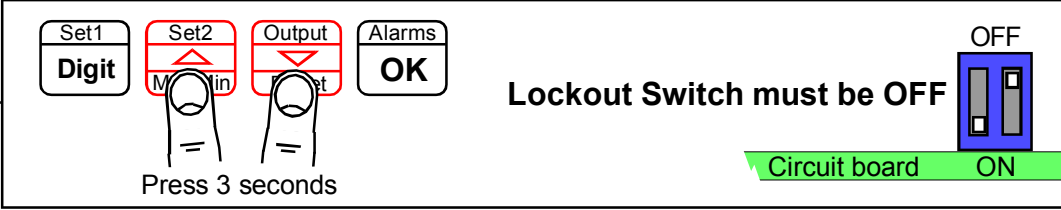


Press 3 seconds

Lockout Switch must be OFF


Circuit board ON
- 2

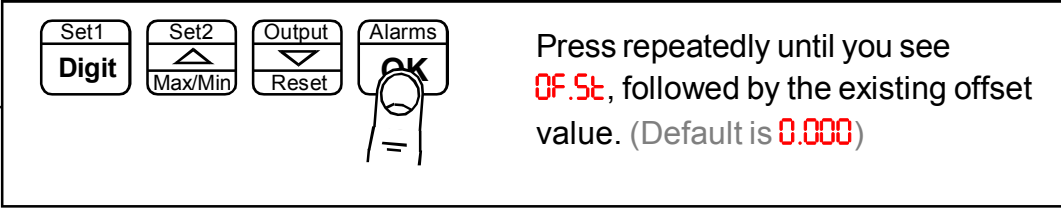

Press repeatedly until you see **OF.St**, followed by the existing offset value. (Default is **0.000**)
- 3

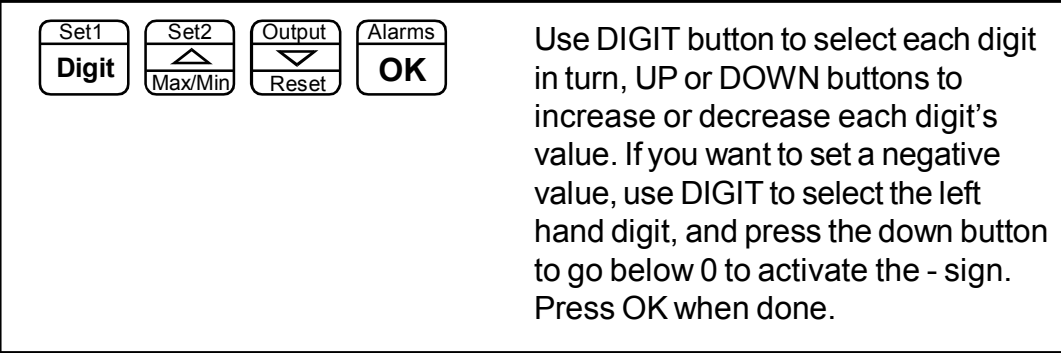

Use DIGIT button to select each digit in turn, UP or DOWN buttons to increase or decrease each digit's value. If you want to set a negative value, use DIGIT to select the left hand digit, and press the down button to go below 0 to activate the - sign. Press OK when done.
- 4

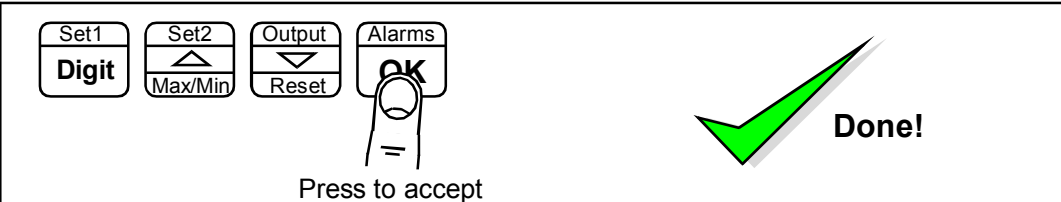

Press to accept

Done!

You may want to adjust a SCALE FACTOR value also, without affecting calibration. See the separate SCALE page for this feature.

# Menu timeout adjustment

The display has a default timeout of 60 seconds, to allow you sufficient time to refer to the manual between key operations.

You can make this period shorter, if you wish, once you become more familiar with the setup method.

1

Set1  
Digit

Set2  
Max/Min

Output  
t

Alarms  
OK

Press together, briefly

Lockout Switch must be OFF

Circuit board ON

2

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press repeatedly until you see **dy. XX** where **XX** is the delay in seconds. Choices are ...

**dy. 10**  
**dy. 20**  
**dy. 30**  
**dy. 60** (default)

3

Set1  
Digit

Set2  
Max/Min

Output  
Reset

Alarms  
OK

Press briefly to toggle

Press DOWN or UP button briefly and repeatedly to choose from **dy. 10** or **dy. 20** or **dy. 30** or **dy. 60**

4

Set1  
Digit

Set2  
Max/Min

Output  
Reset


Alarms  
OK

Press to accept

**Done!**


## Reverse Display function (mirror image)

If you need to be able to see a reflection of the display in a mirror or other reflective surface, for example in a simple heads-up system, or for drivers reversing into a bay, using mirrors only, you can set the display to show as a mirror image.

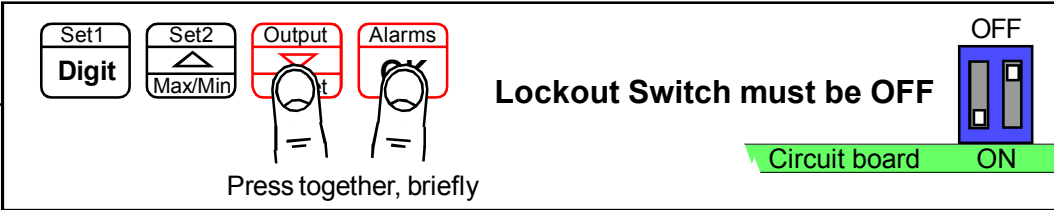
- 1**  


Press together, briefly


Lockout Switch must be OFF

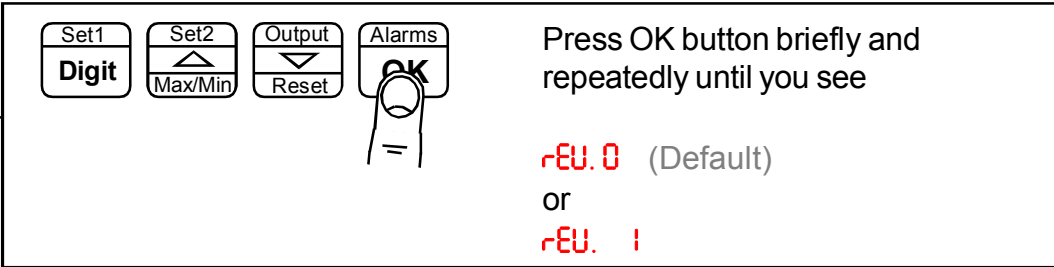Circuit board ON
- 2**  


Press OK button briefly and repeatedly until you see

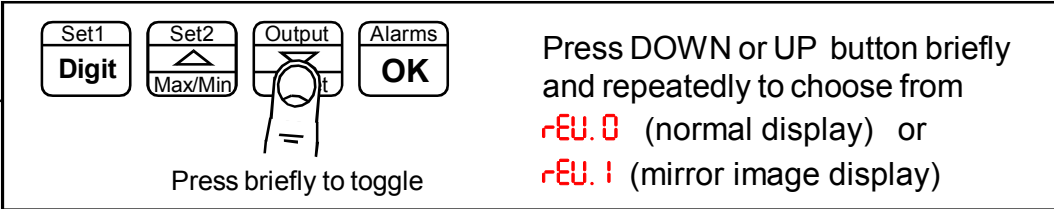rEU. 0 (Default)  
or  
rEU. 1
- 3**  


Press DOWN or UP button briefly and repeatedly to choose from

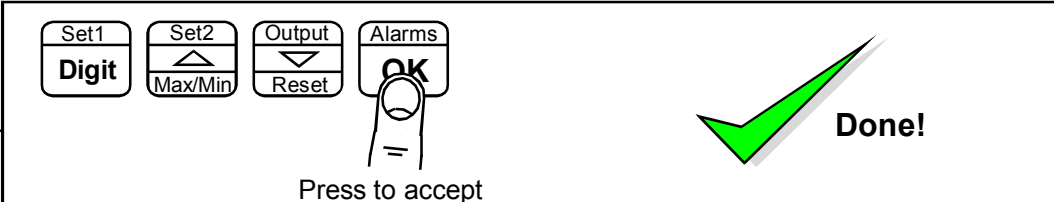rEU. 0 (normal display) or  
rEU. 1 (mirror image display)
- 4**  


Press to accept

Done!



Example of normal display format displaying the number 876543




Example of Mirror Reverse display format displaying the number 876543

# Bootup routine and Tare save choices

When you switch on your meter, it can be set to power up with 3 possible summary message combinations. The choices are:-

- bt 0** = Segment test, followed by a full summary of software revision, calibration audit number, model number, installed options.
- bt 1** = Segment test followed by model number (Default)
- bt 2** = No summary, meter displays the measurement value immediately power is applied.
- bt 3** = All segments illuminate permanently, until a button is pressed

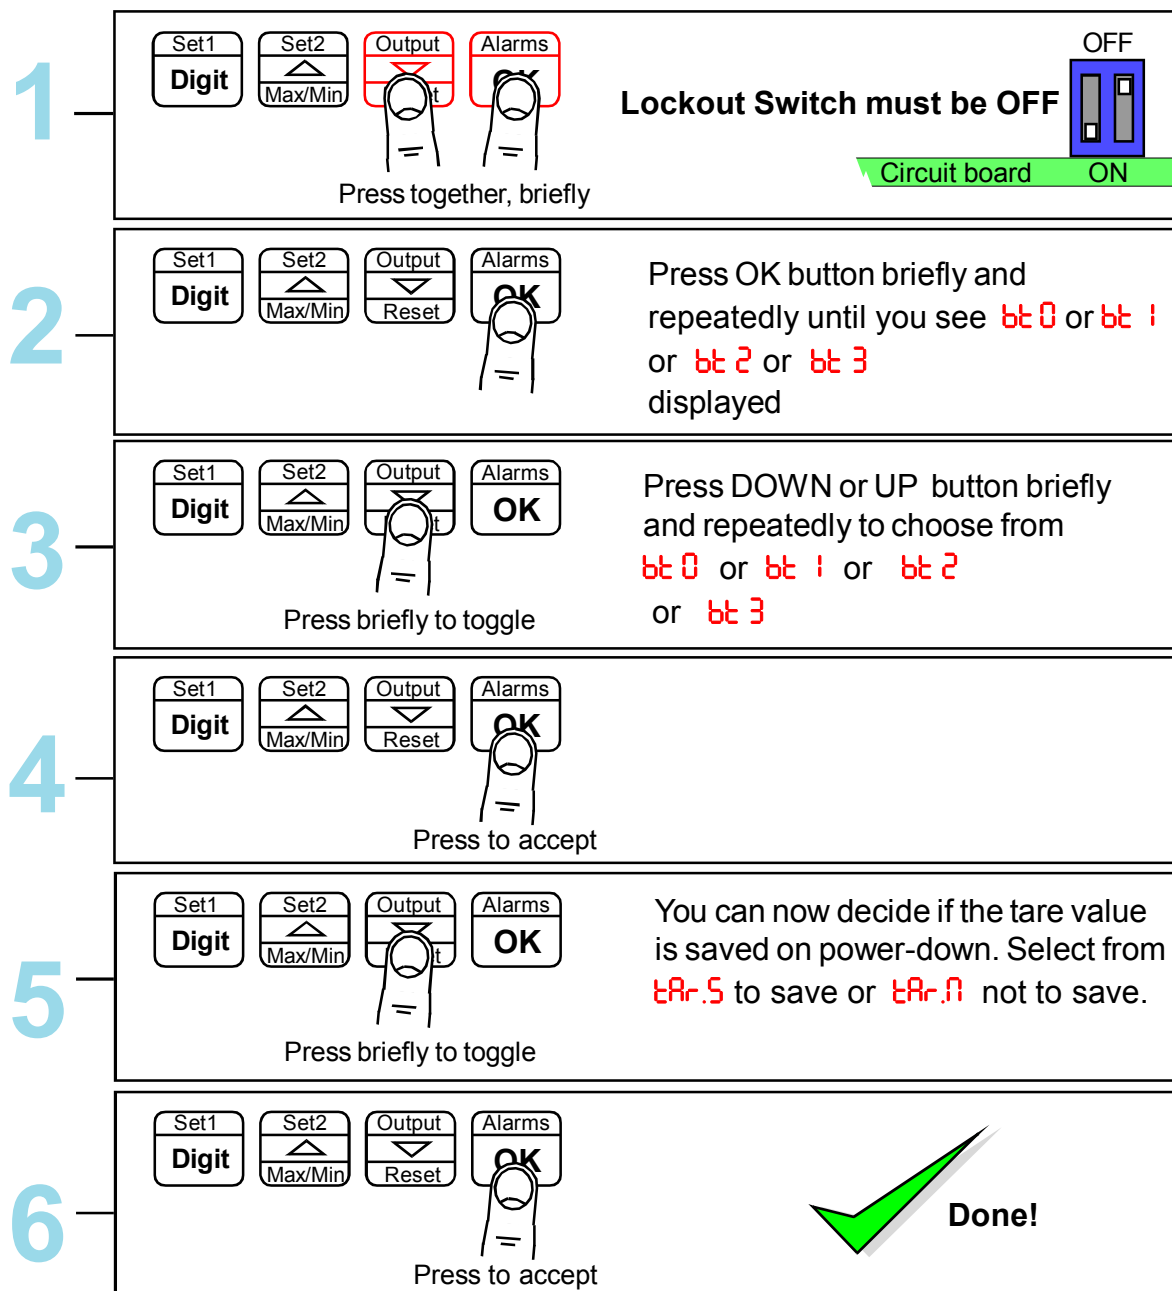

You can trigger the full summary message whenever you want, without having to power the meter off, by pressing and holding the 2 outer buttons (Set1 + Alarms) for more than 3 seconds.

# Multi-Program Memory option MEM

The three contact closure inputs on the rear of the meter may be used to call up between 1 to 7 additional meter setup memories (pages), if the MEM option has been installed. This allows you to save up to 8 complete sets of independent calibrations, alarm settings, analogue output settings and serial comms settings.

First decide how many memory pages you want, as this will determine how many logic inputs you will need to use for the addressing. Logic inputs not required for Page Addressing can be used for other functions such as Tare, Reset, Display Hold, Peak/Valley display.

If you have used all 3 logic inputs for Page Addressing, you can still use the meter's front panel buttons to perform Tare, Reset and peak/Valley view.

**See "Contact Closure Input Functions" page for CC.1, CC.2, CC.3 and COP settings**


| Total number of pages | Logic Inputs required for addressing                |
|-----------------------|---|
| 1                     | none, standard single page meter                    |
| 2                     | 1 Set CC.1 = PA.1                                   |
| 3 or 4                | 2 Set CC.1 = PA.1, Set CC.2 = PA.2                  |
| 5 to 8                | 3 Set CC.1 = PA.1, Set CC.2 = PA.2, Set CC.3 = PA.4 |

1. Set lockout switches OFF, and set page address to 0 or unplug the logic connector.
2. Set the copy instruction to **COP.1** in page address 0 (found after you set CC3).
3. Press all 4 buttons together, display shows **dEF.n**
4. Press the Up arrow to change display to **dEF.4** and press OK.
5. If you want all channels to share a common setting, eg calibration, do that setting now.
6. When you want to do separate settings for each channel, set COP.0

## Programming and recalling individual pages

Plug the logic input connector back in, if you removed it earlier.  
Select a page address using the switch combinations shown below, wired to the Logic Input connector ...

|                |                                   |
|----------------|-----------------------------------|
| Page address 0 | All logic inputs open             |
| Page address 1 | CC.1 closed to Common             |
| Page address 2 | CC.2 closed to Common             |
| Page address 3 | CC.1 and CC.2 closed to Common    |
| Page address 4 | CC.4 closed to Common             |
| Page address 5 | CC.1 and CC.3 closed to Common    |
| Page address 6 | CC.2 and CC.3 closed to Common    |
| Page address 7 | All logic inputs closed to Common |

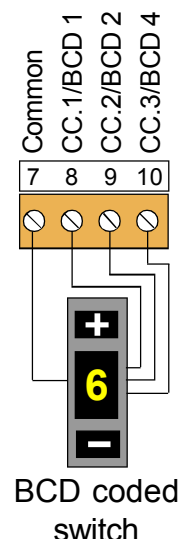

Perform the settings you require, according to the pages in this manual. Do this for all page addresses required. Then put the lockout switch in its ON position. Now, if you select a page address, the meter will briefly confirm the chosen page address on screen, and will then function according to the settings you programmed for that address.

Suitable BCD coded switches are available from many electrical supply stores.

For example consider Kraus & Naimer part A540-600 E24 or Apem part number IRBC10N1248 or London Electronics part number SW2P-8W-BCD, which also provides separate 2 pole 8 way signal selection function.

# Error codes and fault finding

A digital display showing the error code "-Ur-" in red characters.

1. Under Range. The meter is being asked to display a value which is more negative than its limit of -1999

A digital display showing the error code "-Or-" in red characters.

2. Over Range. The meter is being asked to display a value which is higher than its limit of 9999

These fault codes could be displayed because the signal is too negative, too positive, or because there is a wiring error, or because the display's scaling has been adjusted to give excessive sensitivity, or because there is a fault in the display.

a. If you are connecting a 4-20mA signal to the display, please measure the DC millivolt signal between terminals 2(-) and 3(+) Ideally, you will measure 132mV at 4mA and 660mV at 20mA.

If the voltage is much higher, there may be a problem with the 33 Ohm input shunt resistor.

You can verify this as follows...

Remove the input signal and power connectors to the meter, and measure the resistance between terminals 2 and 3. This should be 33 Ohms. If it is more than this, the resistor has probably been overloaded and burned by having a voltage connected across it. Please check your field wiring to ensure that no more than 30mA or 1V can be applied to the current input terminals.

Sometimes excessive current can feed to the current input of the display if your 2 wire 4-20mA transmitter is faulty or is wired incorrectly, because we rely on the transmitter to regulate the loop current between 4 and 20mA. The excitation power supply for the loop may have a much higher capacity than 20mA.

b. If the measurements above were satisfactory, the problem may be caused by the scaling being too sensitive.

If you are happy to do so, it is a simple matter to reset the display's scaling to the factory default conditions. Put the lockout switch off and press all 4 buttons together for around 3 seconds until the display shows "dEFS n". Then press the UP button once so the display shows "dEFS Y". Now press the OK button and the display will be reset to factory defaults.

If still no success, please return the display to us for the attention of our QA Manager, with a report of what you found, for repair.

# How to install option boards



Where the product is intended for “UL” installations removal or addition of option boards is not permitted.




**Warning:** Disconnect power before you expose the internals of the display

If you want to open your display to install or modify option boards, follow these steps...

- 1) Switch off power to the display and unplug all connectors.
- 2) Undo all the thumb screws on the rear case, store them safely and remove the back panel
- 3) Locate the main option board, which will be similar in appearance to the diagram below. If a main option board is absent, which will be the case if the display was ordered without any output options, then a main option board will need to be fitted.

The board assemblies will look like this...

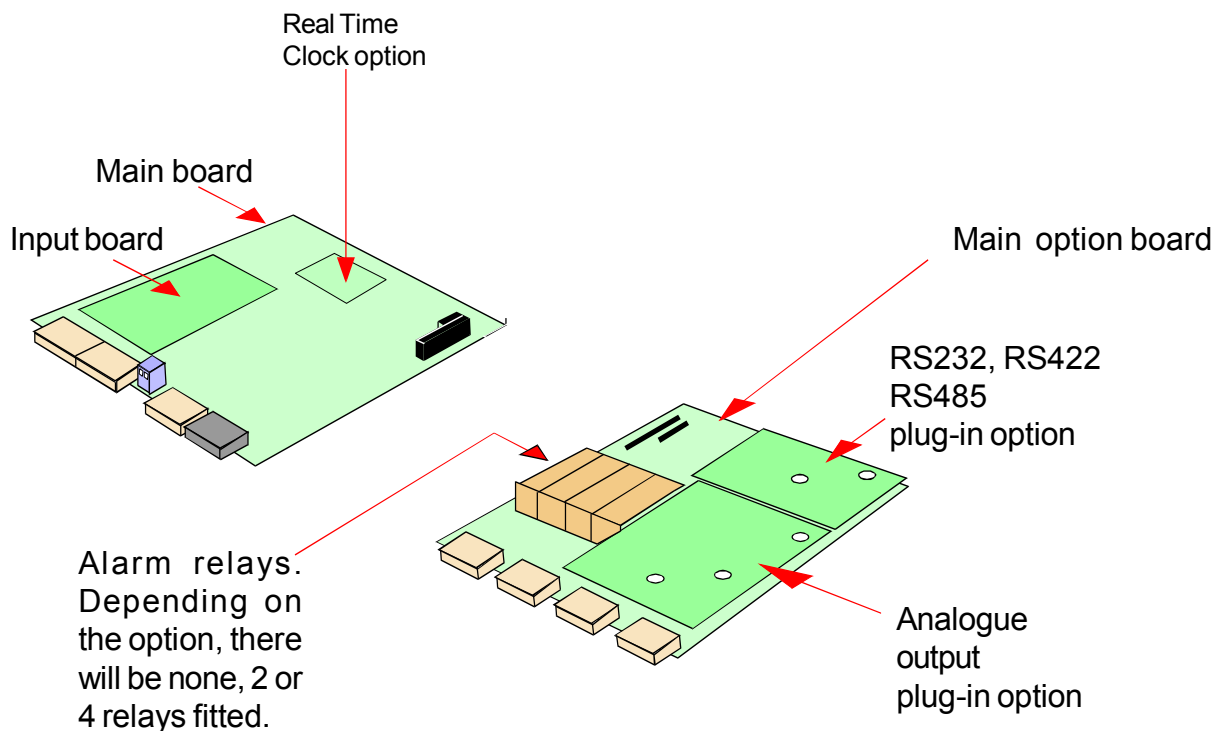

The analogue output and RS232 or RS422 plug-in option boards are fixed to the main option board with white plastic pillars. You must apply a firm force when fitting or removing these options.

Always be careful to connect the pins to sockets accurately. When reassembling, make sure option boards are firmly fixed to the upper option board.

# Waste Electrical Electronic Equipment (WEEE)

In Europe, this equipment must be disposed of in accordance with European Parliamentary Directive 2002/96/EC

This directive encourages recycling and the reduction of waste materials in the environment.

This means it must be sent to an approved recycling plant if you want to dispose of it.

It must not be thrown away with general rubbish.



## WEEE Waste Recycling

If you are unable to dispose of this item locally, you may send it to us for recycling.

### Conditions:

1. We will only accept items of our manufacture.
2. You must pay for the transport of the goods to us.
3. We will only accept items if they include a signed declaration by an authorised person in your organisation, stating that :-
  - i. The item is safe to handle and has no contaminants which may be harmful to health.
  - ii. You wish us to dispose of or destroy the item(s)



# Equipment Specifications

|                                |  |
|--------------------------------|--|
| <b>Case Material</b>           | Heavy duty welded uPVC   |
| <b>Connectors</b>              | Internal detachable Screw Terminal connectors accessed via compression glands  |
| <b>Environmental</b>           | Storage Temperature range -20 to +70C, non condensing<br>Operating temperature range 0 to 50C. Internal heater option available for use in conditions down to -25C |
| <b>Power Burden</b>            | 100-240 VAC, 48 VAC, 45 to 60Hz or 11-30 VDC optional<br>40VA maximum  |
| <b>Sealing</b>                 | IP65 all round, provided the display is mounted vertically and that all cable glands and rear case-closure screws are properly secured.                            |
| <b>Input Signals (bipolar)</b> | 0-10V, 0-5V, 1-5V, 0-10mA, 0-20mA, 4-20mA  |
| <b>Input Resistance</b>        | 1 Megohm for voltage, 2 (two) Ohms for current inputs  |
| <b>Accuracy</b>                | +/-0.05% of range  |
| <b>Span tempco</b>             | 25 ppm/Degree Celsius  |
| <b>Zero Tempco</b>             | 30 ppm/Degree Celsius  |
| <b>24V Excitation voltage</b>  | 24VDC nominal rated at 60mA  |
| <b>10V Excitation voltage</b>  | 10VDC nominal rated at 20mA  |
| <b>Filtering / smoothing</b>   | Selectable time constants of 0 to 25 seconds.  |
| <b>A/D conversion</b>          | Sigma-Delta 10 conversions per second, 50/60Hz rejection<br>Resolution 1 in 400 000 max. over full range   |
| <b>Display update rate</b>     | 10 readings per second.  |
| <b>Display Range (max)</b>     | -199999 to +199999, depending on available signal level.   |

## Plug-In Output Options

|                              |  |
|------------------------------|--|
| <b>Analogue O/P</b>          | See analogue output manual for details.<br>Available from our website. |
| <b>Alarm Relay O/P</b>       | See alarm output manual for details.<br>Available from our website.    |
| <b>ASCII Data O/P</b>        | See Serial output manual for details.<br>Available from our website.   |
| <b>Calendar/Clock option</b> | See serial output manual for details.<br>Available from our website.   |

# Record of Revisions

|                  |   |
|------------------|---|
| 6 September 2010 | Version F0.18 Software released. Manual format revised to improve clarity and segregate easy from advanced menu functions. Optional outputs now described in their own dedicated manuals. DIN Rail mounting option added. Cabling guidance added.   |
| 17 November 2010 | <p>Version F00.19 Software released. Intended for use with 9122-2470 input board, having switched capacitor input filter feature. Code will auto detect this board. If a previous version board is installed, the meter will skip switched capacitor filter section of menu.</p> <p>The newly released 9122-2470 input board allows 5V,10V or 24V excitation.</p> |
| 26 November 2010 | Version F00.20 Software released. Allows serial data output to derived from Net or Gross measurement on full featured FX-XN-P versions  |
| 2 February 2011  | Version F00.21 software released. New bootup routine added for LED testing.   |
| 28 February 2011 | Warranty increased to 3 years and terms added.  |
| 30 August 2011   | Corrected Remote Programmer connection details.   |
| 30 July 2014     | Version F00.23 software released and V4 input board with active filter described  |
| 21 January 2016  | Mounting dimensions amended for flush case bosses   |
| 10 February 2017 | F4.01 software released, plus V4 input board with selectable active filter rate.  |
| 13 March 2019    | Input resistance changed to 2.000 Ohms for 4-20mA   |

# Declaration of CE Conformity

Declaration Reference : INTUITIVE Mk2  
Issue Date : 30 April 2007  
Products Covered : INTUITIVE Mk2 series  
Title : DOC-INTUITIVE2

This is to confirm that the Product covered by this declaration has been designed and manufactured to meet the limits of the following EMC Standard :

**EN61326-1:1997**

and has been designed to meet the applicable sections of the following safety standards

**EN61010-1:2001**



## Conditions

The meters are permitted a worst case error of 1% of A/D range during electro-magnetic disturbance, and must recover automatically when disturbance ceases without the need for human intervention, such as resetting, power-down etc.

The meters covered by this certificate must be installed in adherence to the following conditions :-


Signal cabling shall be routed separately to power carrying cabling (includes relay output wiring)

All signal cabling shall be screened. The screen shall only be terminated to the power earth terminal at the meter end of the cable.

**We design and manufacture a wide range of standard and custom monitoring and control equipment.**

**All our UK manufactured products have a 3 year warranty.**

### Real-Time Production-Line Displays

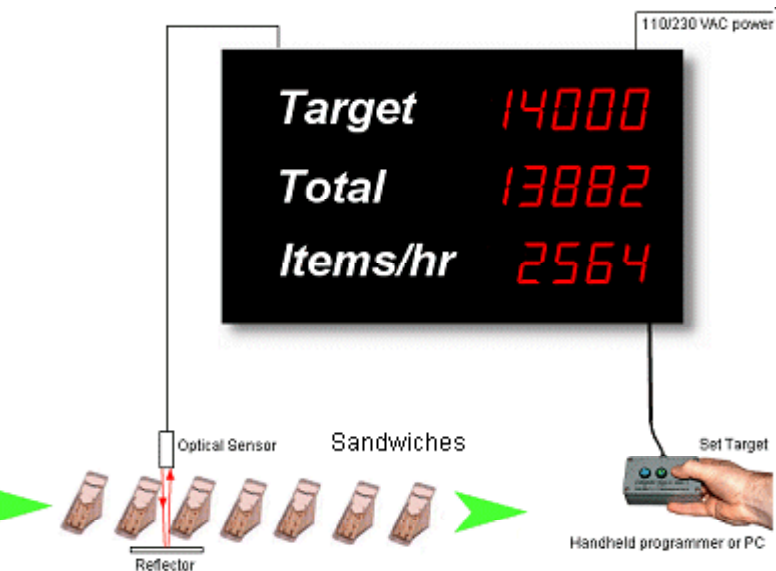

### Large Digital Displays sealed IP65



### Digital Panel Meters




### Power Monitors



### Bargraph Displays



### Message Displays sealed IP65

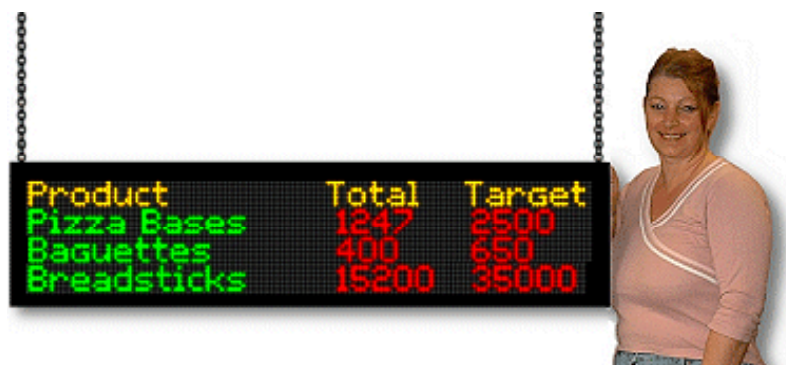

### Signal Transmitters / Isolators

