


Quick start guide



The instructions contained in this quick guide do not replace the full manual. Make sure to read the whole manual carefully and correctly before use.


On/off

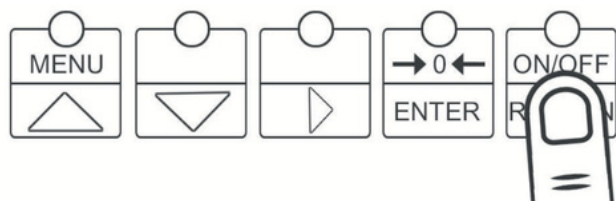

Press ON/OFF to turn on and off .
Once pressed, the display shows the software version number for a few seconds.
Then the untared value will show.

*The dynamometer will not automatically turn off if not used.


Tare function

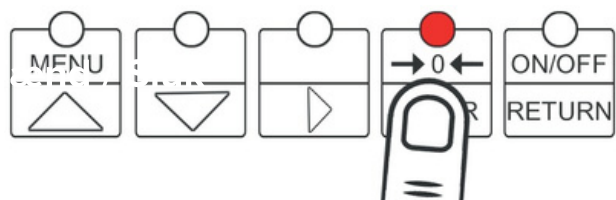

To activate the tare function press and hold →0← until the display shows **0** and the red button lights.
Press →0← to deactivate.


*The tare function will automatically deactivate when the dynamometer is turned off .

Peak hold

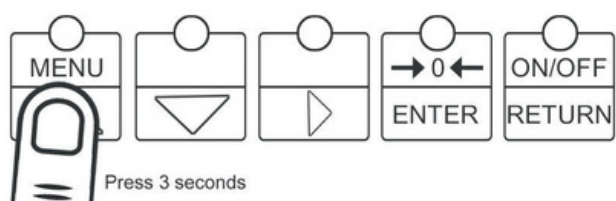

Press and hold MENU until the display shows **1**. Use the arrows to choose between menu **1** and 2.
Menu 1: Peak hold function.
! See Advanced Settings for complete instruction.

Low battery

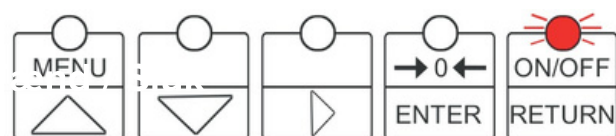

The battery indicator will flash when the battery is low and needs to be charged.